



United Technologies

Performance Parts



# Service Tool Catalog

for

Truck/Trailer, Container, Marine

62-03213 Rev M





# Service Tool Catalog

## Introduction

This service tool catalog identifies service tools used to perform service on transport refrigeration equipment manufactured by Carrier Transicold. Service tools included in this catalog are recommended tools that are considered necessary for proper service.

This catalog is broken down into major tool categories listed on page i. Also, this catalog includes both a pictorial and descriptive reference to most tools listed. This is intended to make it as simple as possible to find the service tools required.

## Ordering Instructions

All orders and inquiries for parts must include:

- Part number
- Description of part as shown
- Quantity required

Address all correspondence for parts to the following address:

Carrier Transicold Division  
Performance Parts Group, TR-20  
P.O. Box 4805  
Syracuse, NY 13221

Fax: (315) 432-3778

email: [ppg.customerservice@carrier.utc.com](mailto:ppg.customerservice@carrier.utc.com)



# How to use this manual

Please take a few minutes to read this page. It explains the content and structure of this manual, which will make it easier to find the tools you need.





<b>Section 1: Compressor and Clutch</b> This section contains tools used on compressors and clutches, including spanner wrenches, clutch removal tools, unloader ring pliers, valve pade blank-off kits, sight glass wrenches, sleeve pullers, bearing pullers, and more.
<b>Section 2: Electrical</b> This section contains electrical tools, including meters, testers, diagnostic tools, grounding grounding straps, extractors, crimpers, removal tools, terminals, splice kits, cables, battery packs, software, software cards, and more.
<b>Section 3: Engine</b> This section contains tools used on engines, including testers, hose replacements, charts, adapters, install tools, puller sets, wrenches, meters, lifting tool, allignment rod, and more.
<b>Section 4: Fittings</b> This section contains fittings, including elbows, caps, quick connectors, Schrader valve cores, adapters, and more.
<b>Section 5: General Tools</b> This section contains general tools, including gauges, hoses, strobe lights, testers, heat gun, thermometers, meters, probes, sensors, sockets, air gap guage tools, seal drivers, driver tools, wrenches, rivnut install kits, lifting tools, and more.
<b>Section 6: Refrigeration Tools</b> This section contains refrigeration tools, including manifold gauge sets and accessories, hoses, gaskets, couplers, o-rings, oil pump, vacuum pump, vacuum gauge, refrigeration wrenches, refrigerant analyzer, acid test kits, leak detectors, refractomers, and more.
<b>Section 7: Shop Supply, Cleaners and Chemicals</b> This section contains general shop supplies, including compressor oil, grease, paint, coil cleaners and sanitizers, sprayers, insulation, leak detectors, flushes, towels, oil test kits, and more.



## Section 1 - Compressor and Compressor Clutch

<b>Clutch Tools</b>		
	<p><b>Wrench, Spanner for Clutch Armature</b></p> <p>Spanner wrench for holding the armature plate on clutches. The holding pins are adjustable for use on most industry automotive clutches .</p>	<b>07-00240-01</b>
	<p><b>Bearing Driver for Housing (HUB) Mounted Clutch</b></p> <p>Rotor installation tool for housing -mounted clutches. Used to tap the inner race onto the compressor hub.</p>	<b>07-00241-00</b>
	<p><b>Socket, Spanner Nut Large with Grease Fitting</b></p> <p>Socket for spanner nut on housing -mounted clutches. Used on the following spanner nuts: 34 -01304-00 twin port compressor , 34 -06083 -00, and 34 -01161 -00.</p> <p><b>NOTE:</b> Outside dia meter is 3.5 " ,inside diameter is 2.75" - where teeth grab on nut is approx imately 3" dia meter.</p>	<b>07-00242-01</b>
	<p><b>Socket, Spanner Nut Small without Grease Fitting</b></p> <p>Socket for spanner nut on housing -mounted clutches. Used on the 34 -01162 -00 spanner nut.</p> <p><b>NOTE:</b> Outside dia meter is 2.75 " - where the teeth grab the spanner nut is approx. 2.5" dia meter.</p>	<b>07-00242-02</b>
	<p><b>Trailer Unit Standby Clutch Adjustment Tool</b></p> <p>Used to adjust the standby clutch shoes on trailer units.</p>	<b>07-00455-00</b>
	<p><b>Trailer Unit Standby Clutch Bearing Press Tool</b></p> <p>Used to press in the bearing on trailer unit standby clutches.</p>	<b>07-00456-00</b>

## Section 1 - Compressor and Compressor Clutch

	<p><b>Bolt, Clutch Removal, 7/8-14X4"</b> Used to remove the clutch on 05G compressors</p>	<p><b>07-00381-00</b></p>
	<p><b>Pliers, Unloader Ring</b> Used to install the unloader valves on hot gas bypass compressors. Pliers compress piston ring.</p>	<p><b>07-00223-00</b></p>
	<p><b>Wrench (Special) Compressor Oil Pan</b> Used to tighten compressors base plate mounting bolts with compressors installed.</p>	<p><b>07-00267-01</b></p>
	<p><b>05G Shaft Seal Tool</b> Used to install new bellows-style shaft seal on the shaft of an 05G compressor.</p>	<p><b>07-00460-00</b></p>
	<p><b>Install Tool, TK Shaft Seal</b> Used to install the 20-22-778 one inch shaft seal on TK compressors.</p>	<p><b>07-00388-00</b></p>
	<p><b>05G Lip Seal Install Tool</b> Used to drive new 05G lip seal into the seal cover plate.</p>	<p><b>07-00471-00</b></p>
	<p><b>Filter, Felt Sock for Clean-Up, 05G Compressors</b> Filter (suction sock) for cleaning up systems with solid contaminants. Package of 5.</p>	<p><b>58-00869-00</b></p>
	<p><b>Filter, Felt Sock for Clean-Up 05K Compressors</b> Filter (suction sock) for cleaning up systems with solid contaminants. Package of 5. <b>NOTE:</b> PPG no longer offers the adapter for the York style compressor "sock adapter" (14-60043-00) per Truck Engineering Rouen.</p>	<p><b>58-04165-00</b></p>



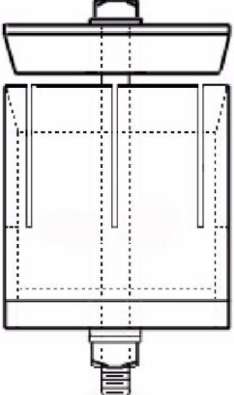
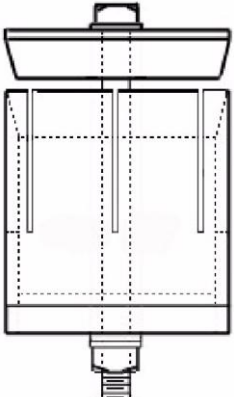

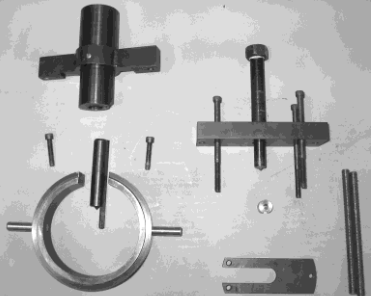
## Section 1 - Compressor and Compressor Clutch

	<p><b>Vise Grip Holder</b> Used for holding motor leads when replacing a terminal block on 06D compressors.</p>	<p><b>07-00264-00</b></p>
	<p><b>Pliers, Crimping, 06D Terminals</b> Used to crimp the motor leads into the terminal block on 06D compressors.</p>	<p><b>07-00263-00</b></p>
	<p><b>Kit, Valve Pad Blank-Off, Unloader Head Suction Cut-Off</b> Cap off plate for two-bolt, 1-3/4" center line service valves.</p>	<p><b>17-13004-00</b></p>
	<p><b>Kit, Valve Pad Blank-Off, 4-Bolt, 2-1/2" Centerline</b> Cap-off plate for four-bolt, 2-1/2" centerline service valves.</p>	<p><b>17-13006-00</b></p>
	<p><b>Kit, Valve Pad Blank-Off, 2-Bolt, 1-5/8" Centerline</b> Cap-off plate for two-bolt, 1-5/8" center line service valves.</p>	<p><b>17-13008-00</b></p>
	<p><b>Kit, Valve Pad Blank-Off, Unloader Head Suction Cut-Off</b> Cap-off plate for the piston on suction cut-off unloading cylinder heads.</p>	<p><b>17-21056-00</b></p>
	<p><b>Kit, Valve Pad Blank-Off, Unloader Head HGBP</b> Cap-off plate for the unloader valve on hot gas bypass or suction cut-off unloading cylinder heads.</p>	<p><b>17-55013-00</b></p>
	<p><b>Compressor Oil Refractometer</b> Used to measure the amount of residual mineral oil in a system being changed to POE oil.</p>	<p><b>07-00316-00</b></p>

## Section 1 - Compressor and Compressor Clutch

	<p><b>Wrench – Sight Glass</b> This improved tool (redesigned and hardened) is used to install and remove the oil sight glass on 05G, 05K, 06D, 5D, 05D, 5F, AND 5H compressors.</p>	<p><b>07-00450-00</b></p>
	<p><b>Wrench – Sight Glass</b> Sight glass installation tool used on Thermo King compressors.</p>	<p><b>20-204-244</b></p>
	<p><b>APU - Quick Start Compressor</b> Used to test-start small 115VAC hermetic compressors up to 5HP. This kit was set up for use with APU compressors, but will also work with other hermetic compressors if appropriate amperage fuse is used.</p>	<p><b>07-00494-00</b></p>
	<p><b>APU - Fuse, Resettable, 20 Amp</b> Used in the 07-00494-00 Quick Start kit for Comfort Pro APU compressors.</p> <p><b>NOTE:</b> This fuse was only sized for use on APU compressors. For all others, check the LRA and follow instructions.</p>	<p><b>07-00494-10</b></p>
	<p><b>5F, 5H Main Bearing Puller</b> Used to pull the main bearings from a 5F/5H compressor. Has a new alignment hub for assured alignment and new acme threads for pull strength.</p>	<p><b>07-00346-00</b></p>

## Section 1 - Compressor and Compressor Clutch

	<p><b>Marine - Sleeve Puller (5F Compressors)</b> Used to pull the sleeves out of 5F compressor cylinders</p>	<p><b>07-00394-00</b></p>
	<p><b>Marine - Sleeve Puller (5H Compressors)</b> Used to pull the sleeves out of 5H compressor cylinders</p>	<p><b>07-00395-00</b></p>
	<p><b>Container - Terminal Box Tool – Container Scroll Compressor</b> Used to remove and replace container unit scroll compressor terminal box</p>	<p><b>07-00436-00</b></p>
	<p><b>Container - Air Compressor Tool Kit</b> Tools for rebuilding Container CA unit air compressor 18-00099.</p>	<p><b>18-00099-40</b></p>





## Section 2 - Electrical

	<p><b>Multimeter, Digital</b>  This meter allows the technician to analyze electrical components ranging from basic devices to highly sophisticated solid state controllers. It features an analog and digital display to test changing or stable signals along with audible continuity. A continuous tone signals continuity; a beep signals a forward biased diode or transistor. Test leads and protective holster included.</p> <p><i>Voltage DC:</i> Range: 6.000V - 1000V  <i>Voltage AC:</i> Range: 600.0 mV-1000V  <i>Amps AC:</i> Range: 60.00 mA ÷ 10A  <i>Amps DC:</i> Range: 60.00 mA ÷ 10A  <i>Resistance:</i> Range: 600.0 Ω - 50 MΩ  <i>Capacitance:</i> Range: 1nF- 9,999 μF  <i>Frequency:</i> Range: 99.99Hz- 99.99kHz</p>	<p style="text-align: center;"><b>07-00243-10</b></p>
	<p><b>Test Leads (Right Angle)</b>  For use with 07-00243-10 meter</p>	<p style="text-align: center;"><b>07-00243-01</b></p>
	<p><b>Multimeter, Digital - Wavetek</b>  A digital multimeter with heavy-duty features for rugged protection from mishaps and adverse environments. Single selector switch makes it easy to use and saves time by enabling you to go directly to the function and range. Ranges in AC/DC voltage and current along with Ohm readings meet all your needs. Case included.</p> <p>Voltage DC: 200mV up to 1500VDC  Voltage AC: 200mV up to 1000VAC  AC/DC Current: 200uA up to 2A  Resistance: 200ohm up to 2M-ohm  Diode Test: Range 0 to 2V  Current 20mA ±20%  Temperature -4 degrees F to +1999 degrees F</p>	<p style="text-align: center;"><b>07-00228-00</b></p>

## Section 2 - Electrical


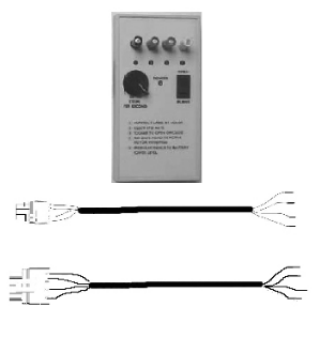
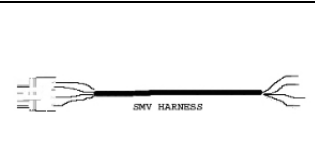
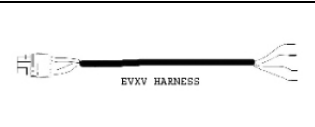



	<p><b>Kit, Test Leads</b> For use with 07-00228-00 meter. Can also be used with the 07-00243-10.</p>	<p style="text-align: center;"><b>07-00230-00</b></p>
	<p><b>AC Current Clamp</b> This accessory extends the AC current measurement capability of P/N 07-00228 or CTD P/N 07-00243 multimeter to 150 amperes without breaking the circuit under test. The 1000:1 current transformation allows direct reading in amperes when used with the 200 mA AC current range of the multimeter.</p>	<p style="text-align: center;"><b>07-00229-00</b></p>
	<p><b>50A Single Bank AGM Battery Charger</b> Used to fully charge the AGM battery using a three step charging profile.</p>	<p style="text-align: center;"><b>07-00498-00</b></p>
	<p><b>Battery Tester, Heavy Duty Handheld</b> Used to rapidly, precisely diagnose bad batteries individually or in a pack. The unit also analyzes vehicle starting and charging systems.</p>	<p style="text-align: center;"><b>07-00499-00</b></p>
	<p><b>Temperature Tester - 4-Lead</b></p> <ul style="list-style-type: none"> <li>• Quad Thermocouple input</li> <li>• Differential T1-T2 and T3-T4</li> <li>• Temp range -346° to +2192°F (J)</li> <li>• Temp range -328° to +2498°F (K)</li> <li>• Data logging</li> <li>• 9,999 Memory positions</li> <li>• USB interface (software included)</li> <li>• Thermocouple temperature offset</li> <li>• MIN, MAX, AVG &amp; Hold</li> <li>• Probe Storage</li> <li>• Accepts J, K, T and E type probes</li> </ul> <p><b>Accessories Included:</b> 4 K type probes with lead wraps 2 AAA batteries</p>	<p style="text-align: center;"><b>07-00504-00</b></p>

## Section 2 - Electrical

	<p><b>Temperature Tester – Spare Lead</b></p> <p>4-foot K-type probes with lead wraps for use with the 07-00504-00 tester.</p>	<p><b>07-00504-01</b></p>
	<p><b>Temperature Tester – Soft Case</b></p> <p>A soft case for use with 07-00504-00 temperature tester and probes.</p>	<p><b>07-00504-02</b></p>
	<p><b>Tachometer, Laser, RPM</b></p> <p>Used to read RPMs on rotating devices.</p>	<p><b>07-00488-01</b></p>
	<p><b>Strobe Light</b></p> <p>Used to set and check engine and compressor speed. Can be used to freeze motion of pulleys, fan blades, etc. This strobe is a replacement for part number 07-00206-00.</p>	<p><b>07-00486-00</b></p>
	<p><b>Tester, ML2i/ML3</b></p> <p>Used to determine the integrity of the ML2i and ML3 microprocessors.</p>	<p><b>07-00428-00SV</b></p>
	<p><b>DataReader (Container)</b></p> <p>Includes DataReader, battery, and cable</p> <p><b>Cable part number – 22-01743-00</b></p>	<p><b>12-50377-01/2.5</b></p>
	<p><b>Diagnostic Tool, Cab Command Cable</b></p> <p>Used to diagnose the cab command cable on 30/40/50S and 30/40/50X truck units.</p>	<p><b>07-00440-00</b></p>



## Section 2 - Electrical

	<p><b>APX Micro Service Harness</b> Used to check voltage leaving micro. Can also be used in conjunction with 07-00375-00SV to drive the valves on Trailer refrigeration units.</p>	<p style="text-align: center;"><b>07-00515-00</b></p>
	<p><b>Tester, Stepper Motor Drive</b> Used to check and/or operate the stepper motor on container units and XTC trailer units. This tool is also used to drive the EVXV open and closed for service diagnosis during troubleshooting.</p>	<p style="text-align: center;"><b>07-00375-00SV</b></p>
	<p><b>Individual Harness for CSMV (Suction Modulating Valve SMV)</b> Used on the 07-00375-00SV tester.</p>	<p style="text-align: center;"><b>07-00375-10</b></p>
	<p><b>Individual Harness for EVXV (Electronic Expansion Valve EXV)</b> Used on the 07-00375-00SV tester.</p>	<p style="text-align: center;"><b>07-00375-11</b></p>
	<p><b>Container Stepper Jumper Assembly</b> Container stepper jumper cable for microprocessor and stepper motor driver 07-00375-00SV.</p>	<p style="text-align: center;"><b>07-00408-00</b></p>
	<p><b>Kit, Static Dissipate</b> A work surface designed to prevent electrostatic discharge from damaging solid-state electronic devices and components during service.</p>	<p style="text-align: center;"><b>07-00277-00</b></p>
	<p><b>Strap, Grounding</b> A wrist strap grounding to prevent electrostatic discharge from damaging solid-state electronic devices and components during service.</p>	<p style="text-align: center;"><b>07-00304-00</b></p>









## Section 2 - Electrical

	<p><b>Extractor (EPROM)</b> Extractor for EPROM on microprocessors.</p>	<p><b>07-00297-00</b></p>
	<p><b>Inserter (EPROM)</b> Inserter for EPROM on microprocessors.</p>	<p><b>07-00298-00</b></p>
	<p><b>Extractor, EPROM, I-30S</b> Designed to extract male and female mini-fit sr. terminals from their appropriate connectors/housings.</p>	<p><b>07-60048-00</b></p>
	<p><b>40S/50S and 40X/50X Micro Connector Pin Tool</b></p>	<p><b>07-60090-00</b></p>
	<p><b>Extractor Pin</b> Pin extractor for Packard terminals (connector models Metri-Pack 280, Metri-Pack 480, Metri-Pack 630, and Metri-Pack 800).</p>	<p><b>07-00400-00</b></p>
	<p><b>Extractor Pin (AMP Connector)</b> For removal of terminal connector pins from connectors used with auto-start and microprocessor harnesses.</p>	<p><b>07-00254-00</b></p>
	<p><b>Terminal Tool (Removing Packard Terminals in Thermistor Part #12-00452-00) - Advanced Micro</b> Used to remove the terminals from the 12-00452-00 thermistor connector. Also used with Weather Pack terminals (male and female).</p>	<p><b>07-00387-00</b></p>

## Section 2 - Electrical

	<p><b>Extractor, ML-2, ML-2i and ML-3 Connector</b>                  Metri-Pack 150, 280, GT150, GT280, 280 Tangless®, 280 bus bar, 630 pull-to-seat, lamp socket B1 and W3, and Metri-Pack 800 electrical connectors.</p>	<p style="text-align: center;"><b>07-00329-00</b></p>
	<p><b>Crimper, Micro Pin</b>                  Crimper for micro pin on Container unit.</p>	<p style="text-align: center;"><b>07-00268-00</b></p>
	<p><b>Crimper, Metri-Pack ML-2, ML-2i and ML-3 Connectors</b>                  Unsealed 150 Metri-Pack, 150.1 and 150.2 pull-to-seat core and insulation</p>	<p style="text-align: center;"><b>07-00330-00</b></p>
	<p><b>Crimper, Weather Pack</b>                  Used with Weather Pack connectors and terminal pins 14 to 20 gauge.</p>	<p style="text-align: center;"><b>07-00370-00</b></p>
	<p><b>Crimper, AMP Unsealed</b>                  All-purpose crimper for AMP terminals. for wire size 20-14 AWG (core and insulation), 10-12 core only</p>	<p style="text-align: center;"><b>07-00401-00</b></p>
	<p><b>Crimper, Unsealed</b>                  Used on Vector generator power leads.</p>	<p style="text-align: center;"><b>07-00496-00</b></p>
	<p><b>Crimper, Weather Pack</b>                  This crimper is used on the Metri-Pack sealed 150 and 280 series core and insulation. 22-14awg</p>	<p style="text-align: center;"><b>07-00519-00</b></p>
	<p><b>Crimper, XtendFRESH™</b>                  Use with the fuse holder on a Container XtendFRESH system.</p>	<p style="text-align: center;"><b>07-00545-00</b></p>






## Section 2 - Electrical

	<p><b>Crimper, APX, Micro Pins</b> Use on the APX Micro Modules, ENSCU, etc.</p>	<p><b>07-00538-00</b></p>
	<p><b>Wire Crimper, MAC Tools</b> Crimper can be used on various size Packard and Amp connectors.</p>	<p><b>MAC Tools Part Number: TCT1028</b></p>
	<p><b>Terminal Removal Tool Kit</b> Kit used to remove terminals and reinstall new crimped terminals Includes all the 07-00397 dash numbers. (-01 through -12)</p>	<p><b>07-00397-00</b></p>
	<p><b>Universal Hand Crimp Tool</b> Hand crimp tool, Deutsch connectors, and ML-2, MI-2i and ML-3 connectors.</p>	<p><b>07-00397-02</b></p>
	<p><b>Terminal Removal Tool</b> Removal tool, Deutsch connectors</p>	<p><b>07-00397-01</b></p>
	<p><b>Removal Tool, Blue</b> Wire size 16-18 gauge, Deutsch connectors. Primarily used on Multi-Temp units.</p>	<p><b>07-00397-03</b></p>
	<p><b>Removal Tool, Yellow</b> Wire size 12 gauge Deutsch connectors. Primarily used on Multi-Temp units.</p>	<p><b>07-00397-04</b></p>
	<p><b>Removal Tool, Green</b> Wire size 14-18 gauge Deutsch connectors. Primarily used on Multi-Temp units.</p>	<p><b>07-00397-05</b></p>


## Section 2 - Electrical

	<p><b>Join Terminal 14-16 Gauge</b>                  Deutsch connectors. Used on 1st generation Multi-Temps (10-pin plug)                  DeutschHD10</p>	<p style="text-align: center;"><b>07-00397-06</b></p>
	<p><b>Socket Terminal 14-16 Gauge</b>                  Deutsch connectors</p>	<p style="text-align: center;"><b>07-00397-07</b></p>
	<p><b>Join Terminal 14-18 Gauge</b>                  Deutsch connectors</p>	<p style="text-align: center;"><b>22-01613-14</b></p>
	<p><b>Socket Terminal 14-18 Gauge</b>                  Deutsch connectors</p>	<p style="text-align: center;"><b>22-01613-15</b></p>
	<p><b>Pin Terminal, 12-Gauge</b>                  Deutsch connectors</p>	<p style="text-align: center;"><b>07-00397-10</b></p>
	<p><b>Socket Terminal 12-14 Gauge</b>                  Deutsch connectors</p>	<p style="text-align: center;"><b>07-00397-11</b></p>

## Section 2 - Electrical

	<p><b>Cavity Plug - 12-16 Gauge</b> Deutsch connectors</p>	<p><b>07-00397-12</b></p>
	<p><b>Light Bulbs</b> For use with previously offered temperature controller/diode board test module 07-00208-00.  Package of 5</p>	<p><b>16-03004-00</b></p>
	<p><b>Socket Terminal, Connector EC - (A-K), (L-Y)</b> Female terminal for 22-01777-00SV and 22-01777-01SV microprocessor connectors.</p>	<p><b>22-01777-03</b></p>
	<p><b>Fast Splice Kit, Cable Repair</b> For 10 AWG and 11 gauge. Uses lug instead of butt connectors. Shore power cables. Best with cable diameters of approximately 3/4 inch.</p>	<p><b>22-50396-00PK5</b></p>
	<p><b>Fast Splice Kit, Cable Repair</b> For 10 AWG and 11 gauge. Uses lug instead of butt connectors. Shore power cables. Best with cable diameters of approximately 3/4 inch.</p>	<p><b>22-50396-00PK25</b></p>

## Section 2 - Electrical

	<p><b>Splice Kit, Power Cable Repair (Without Filler)</b> For 10 AWG and 11 gauge. Butt splices. Shore power cables. Best with cable diameters of approximately 3/4 inch.</p>	<p><b>22-50397-00</b></p>
	<p><b>Splice Kit, Power Cable Repair (With Filler)</b> For 10 AWG and 11 gauge. Butt splices. Shore-power cables. Best with cable diameters of approximately 3/4 inch.</p>	<p><b>22-50398-00</b></p>
	<p><b>Advance Micro Card Drive to PC Parallel Port</b> Reading Advance PCMCIA cards and to reprogram software cards.</p>	<p><b>07-00438-00</b></p>
	<p><b>Advance Micro Card Drive to PC USB Port</b> Reading Advance PCMCIA cards and to reprogram software cards.</p>	<p><b>07-00439-00</b></p>
	<p><b>Jumper, Config (Advance Micro)</b> Config Mode Jumper - White Wire. Used to put Advance micro into Configuration</p>	<p><b>22-50180-00</b></p>
	<p><b>Jumper, PC Mode (Advance Micro)</b> PC Mode Jumper - Green Wire. Allows Advance micro to power up without turning on the SROS switch.</p>	<p><b>22-50180-01</b></p>

## Section 2 - Electrical

	<p><b>Cable, Monitor Program</b></p> <p>Used to connect a PC 9-pin serial (COM1) port to the 3-pin Packard serial port on a Summit micro (Supra, Ultra, Ultima, Extra, Solara, etc.).</p>	<p style="text-align: center;"><b>22-01690-00</b></p>
	<p><b>Download Cable, 6-Foot</b></p> <p>Download data from Container units and Trailer DataLink with Advance micro to a PC. Used with 12-00543 and 12-50150-10 printers and other applications.</p>	<p style="text-align: center;"><b>22-01737-00</b></p>
	<p><b>Download Cable, 20-Foot</b></p> <p>Download data from Container units and Trailer DataLink with Advance micro to a PC. Used with 12-00543 printers and other applications.</p>	<p style="text-align: center;"><b>22-01737-04</b></p>
	<p><b>Download Cable, W Maersk Veam Connector</b></p> <p>Used to download data from the unit DataCorder Veam to Deutsch. Use with 22-01737-00.</p>	<p style="text-align: center;"><b>22-01737-01</b></p>
	<p><b>Download Cable Palm Top</b></p> <p>Used to download data from the unit DataCorder to a palm top.</p>	<p style="text-align: center;"><b>22-01737-02</b></p>
	<p><b>Download Cable, PC, Container</b></p> <p>Used to connect to the MA connector on Container controller to download to PC, DataReader, etc.</p>	<p style="text-align: center;"><b>22-01737-06</b></p>




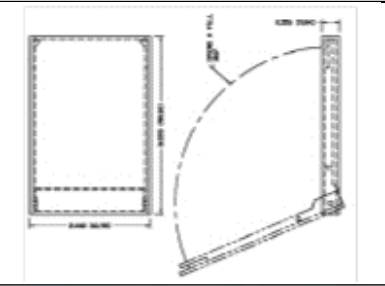



## Section 2 - Electrical

	<p><b>APX USB Download Cable</b></p> <p>Used between a PC and the APX micro. Available in 6- and 20-foot lengths.</p>	<p><b>22-04253-00 (6')</b>  <b>22-04253-01 (20')</b></p>
	<p><b>High Speed USB to Serial Adapter RS232 Interface - Used with Tru-Tech/Tru-View</b></p> <ul style="list-style-type: none"> <li>• USA-19HS high-speed USB to serial adapter</li> <li>• 3-foot USB device cable</li> <li>• CD with driver software and user guide</li> </ul>	<p><b>07-00503-00</b></p>
	<p><b>Service Cable, Telematics-PC</b></p> <p>Used to connect a PC with the PT-6000 or RT-6000 Orbcomm device, allowing the PC to configure the telematics device. Includes a dB-9 connector to a PC serial port on one end and a Packard connector that interfaces into the harness of the telematics device on the other end. <b>NOTE:</b> Connectors not sold separately</p>	<p><b>07-00540-00</b></p>
	<p><b>Splitter Harness, Satellite Power</b></p> <p>This harness is a SAT-PWR (aka OC2 on older Vector and European units) splitter. It plugs into the SAT-PWR connector on the reefer harness and allows 2 SAT-PWR connections. Total amperage for two additional items added to this harness should not exceed 3.75 A. <b>PTS12-060</b></p>	<p><b>22-50420-00</b></p>






## Section 2 - Electrical

	<p><b>40S/50S and 40X/50X Software Upload Kit</b></p>	<p><b>76-61011-00</b></p>
	<p><b>Printers NO LONGER OFFERED.</b></p> <p><b>Only Replacement Parts and Accessories available.</b></p>	<p><b>12-00543-10SV</b></p> <p><b>12-50150-10SV</b></p>
	<p><b>Replacement Paper Roll, Pack of 5</b></p> <p>Paper for the 12-50150-10SV printer</p>	<p><b>12-50150-01</b></p>
	<p><b>Paper Rolls, Pack of 5</b></p> <p>Replacement paper for portable printers (12-00543-00 and 12-00543-10)</p>	<p><b>12-00543-01</b></p>
	<p><b>Battery Pack, Rechargeable</b></p> <p>NI-Cad rechargeable battery pack used on the portable printer (12-00543-00 and -10).</p>	<p><b>12-00543-02</b></p>
	<p><b>Adapter, 120 VAC</b></p> <p>Used to power the portable printer (12-00543-00 and -10) from a 120VAC power source.</p>	<p><b>12-00543-03</b></p>




## Section 2 - Electrical

	<p><b>Adapter, 12 VDC Vehicle</b></p> <p>Used to power the portable printer (12-00543-00) from a vehicle.</p>	<p><b>12-00543-04</b></p>
<p><b>Software and PC Cards</b></p>		
	<p><b>Protective Case</b></p> <p>Used to protect PCMCIA cards.</p>	<p><b>58-50109-00</b></p>
	<p><b>Card, Download, 7-Unit Capacity, NAO</b></p> <p>Used to quickly download data from Advance microprocessors.</p>	<p><b>12-00503-50</b></p>
	<p><b>Card, Option, DataTrak, NAO, 5-Click</b></p> <p>Five-click DataTrak option card. Used to activate the DataTrak (remote communications for satellite) option in the Advance microprocessor.</p>	<p><b>12-00505-53</b></p>
	<p><b>Card, Option, DataTrak, NAO, 10-Click</b></p> <p>10-click DataTrak option card. Used to activate the DataTrak (remote communications for satellite) option in the Advance microprocessor.</p>	<p><b>12-00505-52</b></p>



## Section 2 - Electrical

 <p>The image shows a rectangular Option Card with a white label. The label has the title 'Option Card' at the top, followed by 'Handle with care' and three bullet points: 'Do not bend, drop, or expose to impact.', 'Avoid heat, moisture and direct sunlight.', and the logos for 'dvance' and 'Carrier' at the bottom.</p>	<p><b>Card, Option, DataTrak, NAO, 100-Click</b></p> <p>100-click DataTrak option card. Used to activate the DataTrak (remote communications for satellite) option in the Advance microprocessor.</p>	<p><b>12-00505-55</b></p>
 <p>The image shows a rectangular Configuration Card with a white label. The label has the title 'Configuration Card' at the top, followed by 'Handle with care' and three bullet points: 'Do not bend, drop, or expose to impact.', 'Avoid heat, moisture and direct sunlight.', and the logos for 'dvance' and 'Carrier' at the bottom.</p>	<p><b>Card, Configuration, Advance Microprocessor, NAO</b></p> <p>Used to install either a single configuration OR IntelliSet settings on to an Advance microprocessor. The card can be used multiple times with no limitation on the number. Customer configuration files or IntelliSet files that are available on the Carrier Transicold Information Center can be written to the card using the ReeferManager program.</p>	<p><b>12-00506-50</b></p>
 <p>The image shows a rectangular Option Card with a white label. The label has the title 'Option Card' at the top, followed by 'Handle with care' and three bullet points: 'Do not bend, drop, or expose to impact.', 'Avoid heat, moisture and direct sunlight.', and the logos for 'dvance' and 'Carrier' at the bottom.</p>	<p><b>Card, Option, IntelliSet, NAO, 5-Click</b></p> <p>Five-click IntelliSet Option Card. Used to activate the IntelliSet Option (preset temps for hauling products) in the Advance Microprocessor.</p>	<p><b>12-00505-71</b></p>
 <p>The image shows a rectangular Option Card with a white label. The label has the title 'Option Card' at the top, followed by 'Handle with care' and three bullet points: 'Do not bend, drop, or expose to impact.', 'Avoid heat, moisture and direct sunlight.', and the logos for 'dvance' and 'Carrier' at the bottom.</p>	<p><b>Card, IntelliSet Option, NAO, 10-Click</b></p> <p>10-Click IntelliSet option card. Used to activate the IntelliSet option in the Advance microprocessor.</p>	<p><b>12-00505-70</b></p>
 <p>The image shows a rectangular Program Card with a white label. The label has the title 'Program Card' at the top, followed by 'Handle with care' and three bullet points: 'Do not bend, drop, or expose to impact.', 'Avoid heat, moisture and direct sunlight.', and the logos for 'dvance' and 'Carrier' at the bottom.</p>	<p><b>Card, Program, Advance Microprocessor, NAO</b></p> <p>Used to quickly install new software into Advance microprocessor. Can be updated to latest software version using Reefer Manager (latest version will be supplied).</p>	<p><b>12-00504-50</b></p>





## Section 2 - Electrical

	<p><b>CARD, Program, ML3 Controller Software and Configuration</b></p> <p>Used to quickly install new software into Container ML3 microprocessors (latest version will be supplied).</p>	<p style="text-align: center;"><b>12-00594</b></p>
	<p><b>Card, DataBank Download</b></p> <p>Used to download Container ML3 microprocessors (latest version will be supplied).</p>	<p style="text-align: center;"><b>12-00615</b></p>
<p><b>Carrier Corporation</b> <b>TRU-Tech &amp; TRU-View</b></p>	<p><b>Tru-Tech / Tru-View Program</b></p> <p><i>Advance Micros</i> Next generation of service software after Reefer Manager. This must be downloaded from NA Truck Trailer Information center – Questions contact Service Engineering.</p>	<p style="text-align: center;"><b>N/A</b></p>
	<p><b>APX USB Universal</b> Allows for downloads, and software and configuration files to be uploaded to APX controller.</p> <p><b>DataTrak™ 5 click (license) USB flash drive</b> Same as universal but includes five DataTrak option clicks.</p> <p><b>DataTrak 10 click (license) USB flash drive</b> Same as universal, but includes ten DataTrak option clicks.</p> <p><b>TRU-Tech™ and TRU-View™ Integrated Application, USB</b></p> <p><b>TRU-View™ Application, USB</b> Same as universal but also includes TRU-View program software.</p>	<p><b>12-00734-00</b></p> <p><b>12-00734-01</b></p> <p><b>12-00734-02</b></p> <p><b>12-00734-05</b></p> <p><b>12-00734-06</b></p>






## Section 2 - Electrical

	<p><b>Container PC Card Adapter and Case</b></p> <p>Adapter from PC card to USB. Use to download and install software and configuration into Advance microprocessor.</p>	<p><b>76-50141-00</b></p>
	<p><b>Software, DataLINE</b></p> <p>The DataLine for Windows kit includes:</p> <ul style="list-style-type: none"> <li>- Software installation CD (1)</li> <li>- Installation floppy disks (approximately 15)</li> <li>- D User's Guide - CTD publications P/N T-303</li> </ul> <p><b>License, DataLINE</b></p> <p>Additional DataLINE license.</p>	<p><b>07-00421-00</b></p> <p><b>07-00426-00</b></p>
	<p><b>Software, Reefer Manager and Reports</b></p> <p>For use with Windows 95/98/ME /2000/XP. Used to set up and download Advance and Summit microprocessor and DataLink data recorders. For more information refer to service bulletin SER04-40.</p> <p><b>NOTE:</b> This program replaces Monitor Program 12-00351-06SV and does everything the Monitor Program does and more.</p>	<p><b>12-00616</b></p>
	<p><b>DataCold 500R</b></p> <p>Used on truck units</p>	<p><b>79-60598-20</b></p>

## Section 2 - Electrical

	<p><b>DataCold 500T</b> Used on trailer units</p>	<p><b>79-60598-00</b></p>
	<p><b>Red Insulating Varnish</b> Red glyptol varnish used on alternator studs. This varnish is usually painted on with a brush. Sold in a 2-ounce bottle.</p>	<p><b>07-00479-00</b></p>
	<p><b>APX CAN Bus Diagnostic Tool</b> Used to diagnose and troubleshoot issues within the controller area network (CAN bus) on units equipped with an APX control system.</p>	<p><b>07-00524-00</b></p>
	<p><b>APX Display Diagnostic Tool</b> Used to diagnose and troubleshoot issues within the display on units equipped with an APX control system.</p>	<p><b>07-00525-00</b></p>
	<p><b>APX Modules Diagnostic Tool</b> Used to diagnose and troubleshoot issues within the APX module on units equipped with an APX control system.</p>	<p><b>07-00526-00</b></p>

## Section 2 - Electrical






	<p><b>Lockout for Standby Plugs</b></p>	<p><b>07-00532-00</b></p>
	<p><b>EES Diagnostic Tool</b></p> <p>Used to troubleshoot units equipped with an engine emissions control (EES) system.</p>	<p><b>07-00533-00</b></p>
	<p><b>EES Jumper Assembly, Tier 4, (EES/CAN Port)</b></p>	<p><b>07-00534-00</b></p>
	<p><b>Lockout Clip, 460V Receptacle</b></p>	<p><b>07-60129-00</b></p>
	<p><b>Dielectric Grease</b></p> <p>Seals out moisture and prevents corrosion on electrical connectors. It also disrupts the flow of electrical current, which makes it good for lubricating and sealing the rubber parts of electrical connectors.</p> <p><b>Package Size:</b> 3.5 ounce tube</p>	<p><b>46-00037-00</b></p>



## Section 3 - Engine

	<p><b>Tester, Inject Nozzle</b></p> <p>Used to check and adjust the fuel Injectors in diesel engines.</p>	<p><b>07-00140-00</b></p>
	<p><b>Adapter Injector Line (Accessory for 07-00140-00)</b></p> <p>Adapter line for tester inject nozzle. Accessory for tester inject nozzle. (P/N 07-00140-00)</p>	<p><b>07-00036-00</b></p>
	<p><b>Front Seal Install Tool, Used on 4-Cylinder Kubota engines</b></p> <p><b>NOTE: Kubota does not offer a Rear Seal Install Tool.</b></p> <p>Used to install front seal (GEARCASE) on Kubota 4-cylinder engines.</p>	<p><b>07-00239-00</b></p>
	<p><b>Rear Main Wear Sleeve Install Tool</b></p> <p>Used to install the 25-37385-02 wear sleeves on rear of crankshaft. 4 Cylinder Kubota.</p>	<p><b>07-00521-00</b></p>
	<p><b>Socket, Injector</b></p> <p>Socket for injector removal for Kubota IDI engines.</p>	<p><b>07-00224-00</b></p>


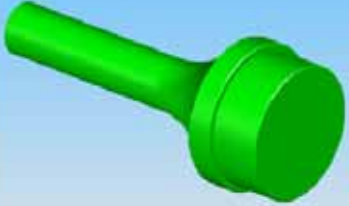




## Section 3 - Engine

	<p><b>Injector Puller Set</b></p> <p>Used on Kubota DI engines. Comes with two adapters so it can be used on the old "DI" pencil-style injectors and the DI low emissions engines. Old part numbers were: 07-00249-00, 07-00458-00.</p>	<p><b>07-00517-00</b></p>
	<p><b>Carbon Ring Installation Tool, Kubota DI</b></p> <p>Used to aid in the installation of the carbon ring seal in pencil type DI injectors.</p>	<p><b>07-00250-00</b></p>
	<p><b>Socket, Water Temperature Sender (Advance Micro Units)</b></p> <p>Used to remove the Water Temperature Sender on Advance Units. 3/4" slotted, deep well socket. Must purchase locally or from Snap-On dealer (Snap-On part number: S6155).</p>	<p><b>Purchase from Snap-On</b></p>
	<p><b>Crowfoot Wrench, New Water Temperature Sensor Tier 4 units, 14mm</b></p>	<p><b>07-00520-00</b></p>
	<p><b>Wrench, Davco Filter</b></p> <p>Used to remove and install the Davco fuel filter.</p>	<p><b>07-00423-00</b></p>







## Section 3 - Engine

	<p><b>Meter, Coolant Refractometer</b></p> <p>Used for testing integrity of glycol and features an illuminated refractometer. (USES: EG = ethylene glycol, PG = propylene glycol).</p>	<p><b>07-00435-00</b></p>
	<p><b>Coolant Hose Lubricant</b></p> <p>Used with Interference-fit coolant hoses on trailer units.</p>	<p><b>02-50010-00</b></p>
	<p><b>Coolant Bottle Test Adapter</b></p> <p>Used to pressure test new pressurized coolant bottles on trailer units. It is to be used with a standard radiator pressure tester.</p>	<p><b>07-00468-00</b></p>
	<p><b>Coolant Bottle Cap Test Adapter</b></p> <p>Used with a radiator pressure tester (stant or equivalent) to test the coolant bottle cap. Used on newer units with pressurized coolant bottle.</p>	<p><b>07-00469-00</b></p>
	<p><b>Main Bearing Install Tool</b></p> <p>Used to install the main bearing on the newer, low emission engines (starting with serial number 3S00001).</p>	<p><b>07-00472-00</b></p>
	<p><b>Main Bearing Extract Tool</b></p> <p>Used to extract the main bearing of the new four-cylinder, low emission Kubota engine (starting with serial number 3S00001).</p>	<p><b>07-00473-00</b></p>



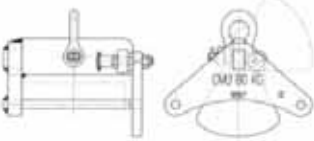
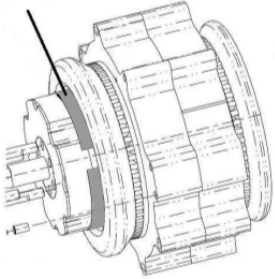

## Section 3 - Engine

	<p><b>Main Bearing Install Tool</b></p> <p>Used to install main bearing on the older four-cylinder Kubota engines (prior to serial number 3S00001).</p>	<p><b>07-00474-00</b></p>
	<p><b>Main Bearing Extract Tool</b></p> <p>Used to extract the main bearing on the older four-cylinder Kubota engines (prior to serial number 3S00001).</p>	<p><b>07-00475-00</b></p>
	<p><b>Spanner Socket and Base Plate</b></p> <p>Used to hold the fuel filter and remove the Plastic ribbed fuel filter heater bowl from the fuel filter. (Fuel filter 30-01079, 30-01123, etc.)</p>	<p><b>07-00537-00</b></p>
	<p><b>Socket, Spanner, Heater Bowl</b></p> <p>Used to remove the fuel filter bowl from the fuel filter. (Fuel filter 30-01079, 30-01123, etc.)</p>	<p><b>07-00537-11</b></p>
	<p><b>Base Plate only, no socket</b></p> <p>Used with part 07-00537-11 to hold the fuel filter while the heater bowl is being removed. (Fuel filter 30-01079, 30-01123)</p>	<p><b>07-00537-02</b></p>
	<p><b>Crank Pulley Impact Socket</b></p> <p>Used on Kubota crankshaft pulley nut. 1-13/16" (46mm) deep well impact socket.</p> <p><b>NOTE:</b> Must purchase locally from Snap-On or another impact socket supplier.</p>	<p><b>SIM-583</b></p>

## Section 3 - Engine

	<p><b>Removal Bracket, Vector Generator</b> Used to rest the generator on during generator removal on Vector trailer units.</p>	<p><b>SKM-5670</b></p>
	<p><b>Engine Platform Tool</b> Used to rest engine on during swing to remove Vector generator.</p>	<p><b>86-04751-00</b></p>
	<p><b>Oil Drain Tool, Vector Units</b> Used to drain the oil from the engine on Vector Units. Often used with bracket part number 68-15706-00.</p>	<p><b>68-15763-00</b></p>
	<p><b>Oil Drain Tool X2, X4 Belt Drive Units</b> Used to drain the oil from the engine on (X2/X4) trailer units. Often used with bracket number 68-15706-00.</p>	<p><b>68-15763-01</b></p>
	<p><b>Tachometer, Laser, RPM</b> Used to read RPMs on rotating devices.</p>	<p><b>07-00488-01</b></p>
	<p><b>Strobe Light</b> Used to set and check engine and compressor speed. Can be used to freeze motion of pulleys, fan blades, etc. This strobe is a replacement for part number 07-00206-00.</p>	<p><b>07-00486-00</b></p>

## Section 3 - Engine

	<p><b>Flywheel Locking Tool</b> Used on Vector trailer units to prevent the engine from turning while working on the generator.</p>	<p><b>07-60083-00</b></p>
	<p><b>Alignment Rods, Vector Generator, 3 pack</b> Used on Vector trailer units to remove/install the generator on the engine.</p>	<p><b>07-60121-00</b></p>
	<p><b>Lifting Tool, Vector, Generator</b> Used on Vector trailer units as a generator service tool. Compatible with all Vector Generators.</p> <p><b>Locking Ear and Nut</b> Used on 07-60085-02. It is designed to be offered as a replacement part, but also as an option to upgrade the older -00 and or/-01 tools to make them the latest mandatory -02 tool.</p>	<p><b>07-60085-02</b></p> <p><b>07-60085-50</b></p>
	<p><b>Shim, Vector Generator Service</b> Used to protect generator windings during service/shipping.</p>	<p><b>54-00630-25</b></p>
<p><b>Engine Compression Tester and Accessories</b></p>		
	<p><b>Compression Tester, Engine, with Case (Gauge Style with Hold)</b> New dial gauge style compression tester. It has a hold setting and pressure relief. Used with the 07-00541, 07-00542, 07-00543-00.</p>	<p><b>07-00544-00</b></p>

## Section 3 - Engine


	<p><b>Adapter, Dial Gauge Compression Tester, Injector hole</b> Used on the newer gauge style compression tester (07-00544-00) to get the pressure from the Injector hole instead of the glow plug hole.</p>	<p><b>07-00541-00</b></p>
	<p><b>Adapter, Dial Gauge Glow Plug Hole, 8mm</b> Used on the newer gauge style compression tester (07-00544-00) to read pressure from the glow plug hole.</p>	<p><b>07-00542-00</b></p>
	<p><b>Adapter, Dial Gauge Glow Plug Hole, 10mm</b> Used on the newer gauge style compression tester (07-00544-00) to read pressure from the glow plug hole.</p>	<p><b>07-00543-00</b></p>
<p><b>Diesel Engine Compression Tester and Accessories</b></p>		
	<p><b>Compression Tester (Diesel Engines 150-850PSI)</b> Kit comes with compression tester, handle, high-pressure tester hose assembly, fitting to go from the injector adapter to the high pressure tester hose, replacement cards, and an instruction CD. <b>NOTE:</b> The following accessories/adapters (07-50005-00 and 07-00179-02 through -10) are used with this item.</p>	<p><b>07-00179-01</b></p>
	<p><b>Hose Replacement, Hose Assembly (Accessory for 07-00179-01 compression tester)</b></p>	<p><b>07-00179-08</b></p>
	<p><b>Adapter, Injector to Tester (Accessory for 07-00179-01 compression tester)</b></p>	<p><b>07-00179-09</b></p>

## Section 3 - Engine

	<p><b>Chart Holder – Orange Plastic (Accessory for 07-00179-01 compression tester)</b></p> <p>Used to hold the compression charts on the compression tester 07-00179-01.</p>	<p><b>07-50005-00</b></p>
	<p><b>Charts, 10-40 Bar (Accessory for 07-00179-01 compression tester)</b></p>	<p><b>07-00179-04</b></p>
	<p><b>Charts, 150-850PSI (Accessory for 07-00179-01 compression tester)</b></p>	<p><b>07-00179-07</b></p>
	<p><b>Compression Test Adapter Tier 4 engines</b></p> <p>Used with (07-00179-01) to check compression through the injector hole.</p>	<p><b>07-00484-00</b></p>
	<p><b>Adapter, Mercedes 0M636 (Accessory for 07-00179-01 compression tester)</b></p>	<p><b>07-00179-03</b></p>
	<p><b>Adapter, Kubota 10mm Glow Plug (Accessory for 07-00179-01 compression tester)</b></p>	<p><b>07-00179-05</b></p>
	<p><b>Adapter, Compression Tester 8mm Glow Plug (Accessory for 07-00179-01 compression tester)</b></p>	<p><b>07-00179-10</b></p>



## Section 3 - Engine

	<p><b>Adapter, Kubota CT4-114 Engine (Accessory for 07-00179-01 compression tester)</b></p>	<p><b>07-00179-06</b></p>
---	---	---------------------------



## Section 4 - Fittings

	<p><b>Fitting, Male 1/4" NPT X Male 1/4" Flare Access Port with Schrader</b></p>	<p><b>06DA-403-844</b></p>
	<p><b>7/16-20 Male Straight Thread O-Ring x 1/4" Male Access Schrader</b> Access fitting</p>	<p><b>0TB0889</b></p>
	<p><b>Fitting, Male 1/8" NPT X Male 1/4" Flare Access Port with Schrader</b></p>	<p><b>17-13010-00</b></p>
	<p><b>Cap, 1/4" Service Valve Gauge Port (Should not be used on Schrader Type Ports)</b> Acorn style gauge port cap. <b>NOT FOR USE ON SCHRADER TYPE PORTS.</b></p>	<p><b>40-00086-04</b></p>
	<p><b>Cap, 1/4" Flare (For use on Schrader Type Ports)</b> For use on SCHRADER type gage ports (includes rubber O-Ring/gasket)</p>	<p><b>DD19CA061</b></p>
	<p><b>Cap, 1/4" Flare, Plastic</b> This is a 1/4" plastic cap used to cap off the Schrader access fitting after service. It comes with an o-ring which is not sold separately.</p>	<p><b>58-60232-00</b></p>
	<p><b>Cap, 3/8" Flare</b> Used on trailer unit king valves.</p>	<p><b>40-00086-06</b></p>
	<p><b>Core, Schrader Valve</b> Schrader valve core used in the standard 1/4" Schrader fittings. Typically used on the older CFC/HCFC access fittings such as 40-01124-00. Package of 10.</p>	<p><b>14-00351-00</b></p>

## Section 4 - Fittings

	<p><b>Schrader Core, 3/8", 134A</b> Standard Schrader core for 134A access fittings. Primarily used for Manuli in-line fittings, but can also be used with other access valves.</p>	<p><b>40-60087-01</b></p>
	<p><b>Adapter, R134A (LO)</b> This is a 134A adapter that mounts on a 1/4" flare, low side. <b>NOTE:</b> Replacement o-ring is part number 40-01184-50.</p>	<p><b>40-01184-00</b></p>
	<p><b>Adapter, 1/4" NPT X 1/2" Acme</b></p>	<p><b>07-00301-00</b></p>
	<p><b>Male 1/4" NPT X Female 7/16" Straight Thread O-Ring</b></p>	<p><b>07-00319-00</b></p>
	<p><b>Plug, 7/16"-20 Straight Thread, O-Ring</b></p>	<p><b>17-44037-00</b></p>
	<p><b>Plug, 9/16"-18 Straight Thread, O-Ring</b></p>	<p><b>17-44706-00</b></p>
	<p><b>90 Elbow Swivel Female 7/16-20 Straight Thread O-Ring X M13</b></p>	<p><b>40-00519-00</b></p>
	<p><b>90 Elbow Swivel Female 7/16-20 Straight Thread O-Ring X M15</b></p>	<p><b>40-00519-01</b></p>
	<p><b>Quick Connector Nipple (R134A Low Side) X M13 (with Cap)</b></p>	<p><b>40-00520-00</b></p>


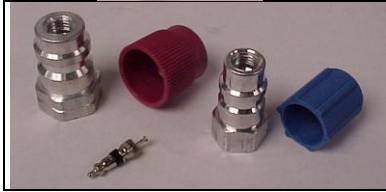
## Section 4 - Fittings

	<p><b>Quick Connector Nipple (R134A Low Side) X M15 (with Cap)</b></p>	<p><b>40-00520-01</b></p>
	<p><b>Cap, Low Side R134A Quick Connect Fitting</b></p>	<p><b>40-00520-02</b></p>
	<p><b>Cap, High Side R134A Quick Connect Fitting</b></p>	<p><b>40-00520-03</b></p>
	<p><b>90 Elbow Swivel R134A Male M13 Straight Thread x Female M13</b></p>	<p><b>40-00523-00</b></p>
	<p><b>90 Elbow Swivel R134A Male M15 Straight Thread x Female M15</b></p>	<p><b>40-00523-01</b></p>
	<p><b>90 Elbow Male 1/4" NPT x Female M13 R134A Low Side</b></p>	<p><b>40-00524-00</b></p>
	<p><b>90 Elbow Male 1/8" NPT x Female M15 R134A High Side</b></p>	<p><b>40-00524-01</b></p>
	<p><b>Male 9/16-18 Straight Thread O-Ring x Female 1/4" NPT</b></p>	<p><b>40-00528-00</b></p>
	<p><b>Male 7/16"-20 Straight Thread O-Ring x Female 1/4" NPT</b></p>	<p><b>40-00528-02</b></p>

## Section 4 - Fittings

	<p><b>Coupling, R134A</b> 7/16" X 20 coupling size by M8 quick connect</p>	<p><b>40-00529-00</b></p>
	<p><b>Tee, Female, 1/4" Flare Swivel x Male 1/4: Flare x LS Quick Connect</b></p>	<p><b>40-00545-00</b></p>
	<p><b>Schrader Fitting Body, 1/4" Male Flare, Braze-in</b> This Schrader can be brazed into most refrigerant lines and used as an access fitting for service. it is 1/4" flare by 1/4" ID or 3/8" OD sweat.</p>	<p><b>40-01124-00</b></p>
	<p><b>90 Elbow Male 9/16 - 18 Straight Thread O-Ring x Female 1/4" NPT</b></p>	<p><b>40-01166-00</b></p>
	<p><b>90 Elbow Male 7/16 - 18 Straight Thread O-Ring x Female 1/4" NPT</b> <b>NOTE:</b> O-ring not sold separately.</p>	<p><b>40-01166-01</b></p>
	<p><b>Tee, Snubber, 1/8" NPT x 1/8" NPTF</b> Pressure switch mounting tee (Trailer products)</p>	<p><b>79-00965-00</b></p>
	<p><b>Adapter, Female, 1/4" x Quick Connect (High Side)</b></p>	<p><b>AC302-438</b></p>
	<p><b>Adapter, Female, 1/4" x Quick Connect (Low Side) with Cap</b></p>	<p><b>AC302-439</b></p>
	<p><b>Adapter, 90 Degree Female 1/4" Flare x Quick Connect (High Side)</b></p>	<p><b>AC302-440</b></p>

## Section 4 - Fittings

	<p><b>Adapter, 90 Degree Female 1/4" Flare x Quick Connect (Low Side)</b></p>	<p><b>AC302-441</b></p>
	<p><b>Retrofit Kit, Service Ports for 134A Fittings (Automotive)</b></p>	<p><b>AC302-458</b></p>











## Section 5 - General

	<p><b>Gauge, Magnehelic</b> Used to accurately set the defrost air switch, which initiates defrost cycle. Includes carrying case, fittings and aspirator.</p>	<p><b>07-00177-00</b></p>
	<p><b>Hose, Replacement, 9-Foot</b> Replacement hose for the 07-00177-00.</p>	<p><b>07-00177-05</b></p>
	<p><b>Aspirator</b> Replacement aspirator for Magnehelic gauge (part number 07-00177-00).</p>	<p><b>07-00177-01</b></p>
	<p><b>Strobe Light</b> Used to set and check engine and compressor speed. Can be used to freeze motion of pulleys, fan blades, etc. This strobe is a replacement for part number 07-00206-00.</p>	<p><b>07-00486-00</b></p>
	<p><b>Flashtube, Xenon (for 07-00206-00 Strobe Light)</b> Replacement bulb for strobe light (part number 07-00206).</p>	<p><b>07-00206-01</b></p>
	<p><b>Belt Alignment Tool - Laser</b> Laser alignment tool quickly identifies the two most common types of pulley misalignment - parallel offset and angular - that reduce belt and pulley service life, and produce unwanted noise.</p>	<p><b>07-00463-00</b></p>
	<p><b>Gauge, Belt Tension</b> Used to adjust belt tension of all non-cogged V-belts. Proper belt tension increases both bearing and belt life.</p>	<p><b>07-00203-00</b></p>

## Section 5 - General

	<p><b>Tester, Belt Tension</b> Used to test belt tension.</p>	<p><b>07-00253-00</b></p>
	<p><b>Rubber Band</b> Replacement part for belt tension tester (part number 07-00253-00).</p>	<p><b>07-00253-01</b></p>
	<p><b>Heat Gun, 120V-50/60hz - 570-1000 degrees Fahrenheit</b> This heat gun replaces part number 07-00256-00, which is no longer available from the supplier. It is used to heat shrink-tubing on wiring connectors and splices. It can also be used to defrost coils, although caution should be used as the high temperature setting will actually melt the aluminum fins.</p>	<p><b>07-00487-00</b></p>
	<p><b>Thermometer, Pocket</b> Bi-metal thermometer for measuring temperature from -40 to +160 degrees Fahrenheit.</p>	<p><b>07-00261-00</b></p>
	<p><b>Thermometer, Digital, Pocket (Degrees Fahrenheit)</b> This is a straight digital (thermistor type) pocket thermometer with a 3-foot probe. Reads in degrees Fahrenheit only.</p>	<p><b>07-00485-00</b></p>
	<p><b>Thermometer, Digital, Pocket (Degrees Centigrade)</b> This is a straight digital (thermistor type) pocket thermometer with a 3-foot probe. Reads in degrees Centigrade only.</p>	<p><b>07-60111-00</b></p>



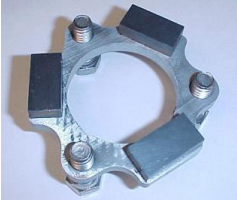



## Section 5 - General

	<p><b>Thermometer, Non-Contact</b></p> <p>Used for checking temperatures at a safe distance. Aim the thermometer and pull the trigger for a temperature reading of 0 to 750° F (-18 to 400° C) without the danger of moving parts or getting burned. Power 9V battery with low power indicator.</p> <p>Features: ±2% Accuracy and LCD backlight.</p> <p>This meter is more advanced than the 07-00323-00 with Max -min - average temperature and high or low audio/visual alarm.</p>	<p style="text-align: right;"><b>07-00324-00</b></p>
	<p><b>Thermometer, Infrared, Non-Contact</b></p> <p>This infrared non-contact thermometer replaces 07-00323.</p> <ul style="list-style-type: none"> <li>• Infrared Thermometer</li> <li>• Certificate of Calibration:Yes</li> <li>• Temperature Measuring Range:-32° C to 600° C</li> <li>• Temperature Accuracy +/-:2 F</li> <li>• Response Time:500mS</li> <li>• Accuracy:+/-1%</li> </ul> <p>Battery Size Code:9V RoHS Compliant: NA</p>	<p style="text-align: right;"><b>07-00478-00</b></p>
	<p><b>Multi-meter, Digital</b></p> <p>This meter allows the technician to analyze electrical components ranging from basic devices to highly sophisticated solid state controllers. It features an analog and digital display to test changing or stable signals along with audible continuity. A continuous tone signals continuity; a beep signals a forward biased diode or transistor. Test leads and protective holster included.</p>	<p style="text-align: right;"><b>07-00243-10</b></p>
	<p><b>Temperature Probe (-40° F to 1,500° F)</b></p> <p>This adapter allows the 07-00243-10 Fluke multimeter to read temperature. It can read in degrees F or C. This adapter comes with one bead probe and can convert any digital multimeter with a 10mohm input into a thermometer. Accepts type "K" thermocouple probes and sensors. Accuracy: 0.5%</p>	<p style="text-align: right;"><b>07-00425-00</b></p>

## Section 5 - General

	<p><b>Temperature Probe (-40° F to 1,500° F)</b></p> <p>To be used with adapter part number 07-00425-00. This temperature probe is used in conjunction with the Fluke Multi-meter 07-00243-10. It is a universal probe that can measure air temperatures from -40° F to 1500° F, including high exhaust temperatures. This temp probe uses the type “K” thermocouple which is the most accurate and quickest responding in the in the industry today.</p>	<p><b>07-00424-00</b></p>
	<p><b>Sensor, Thermometer</b> Sensor used with the old 12-50039-00 and 12-50040-00 light bar thermometers.</p> <p><b>Sensor, Thermometer – 10-Foot</b> <b>Sensor, Thermometer – 18-Foot</b></p>	<p><b>12-00569-51</b> <b>12-00569-52</b></p>
	<p><b>Leads, 50-Foot</b> For use with previously offered Simpson Temperature Tester, 07-00013-00.</p>	<p><b>07-00013-02</b></p>
	<p><b>Case, Meter, for use with 07-00013-00</b> For use with previously offered Simpson Temperature Tester, 07-00013-00.</p>	<p><b>07-00015-00</b></p>
	<p><b>Rod for Servicing Self-Adjusting Idlers on FrigiKing Truck Units</b> Rod for servicing self-adjusting idlers on FrigiKing truck units.</p>	<p><b>07-00276-00</b></p>
	<p><b>Barrier, Flame</b> Used to isolate heat when working in tight quarters.</p>	<p><b>07-00302-00</b></p>

## Section 5 - General

	<p><b>Socket, Spanner for Ultra Gearbox Fan clutch</b></p> <p>Spanner socket for Ultra gearbox clutch spanner nut. Clutch mounted on gearbox.</p>	<p><b>07-00303-03</b></p>
	<p><b>Socket, Spanner for Extra XT Fan clutch</b></p> <p>Spanner socket used to remove the Fan clutch spanner nut. Clutch mounted on fan shaft.</p>	<p><b>07-00303-02</b></p>
	<p><b>Air Gap Gauge Tool (ULTRA Clutch)</b></p> <p>Used to measure the air gap on the 90 degree gear box clutch.</p>	<p><b>07-00360-01</b></p>
	<p><b>Air Gap Gauge Tool, Clutch</b></p> <p>Used on the following trailer unit models: Ultima, Extra XT, Ultra XT, Ultra XTC, and Ultima XTC. Similar in design to part number 07 -00360 -01.</p>	<p><b>07-00432-00</b></p>
	<p><b>Seal Pilot, Small Ultra Gearbox</b></p> <p>Pilot for small seal on Ultra gearbox.</p>	<p><b>07-00308-00</b></p>
	<p><b>Seal Pilot, Large Ultra Gearbox</b></p> <p>Pilot for large seal on Ultra gearbox.</p>	<p><b>07-00309-00</b></p>






## Section 5 - General

	<p><b>Sleeve Tool, Seal</b> Used to guide the fan shaft cap end seal during installation.</p>	<p><b>07-00339-00</b></p>
	<p><b>Sleeve Tool, Seal</b> Used to guide the fan shaft flange end seal during installation</p>	<p><b>07-00341-00</b></p>
	<p><b>Seal Driver, Small Ultra Gearbox</b>  Driver for small seal on the output shaft (clutch side) of the Ultra gearbox.</p>	<p><b>07-00310-00</b></p>
	<p><b>Seal Driver, Large Ultra Gearbox</b>  Driver for large seal on the input shaft (drive end) of the Ultra gearbox.</p>	<p><b>07-00311-00</b></p>
	<p><b>Driver Tool, Seal</b> Used to drive the fan shaft cap end seal during installation.</p>	<p><b>07-00340-00</b></p>
	<p><b>Driver Tool, Seal</b> Used to drive the fan shaft flange end seal during installation.</p>	<p><b>07-00342-00</b></p>
	<p><b>Driver, Bearing</b> Aids in the installation of the fan shaft bearing cup.</p>	<p><b>07-00344-00</b></p>

## Section 5 - General




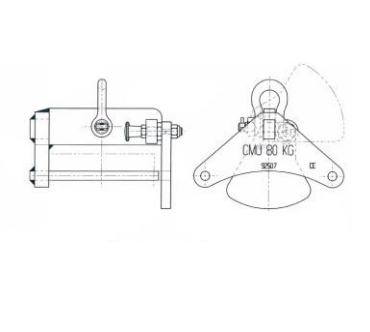

	<p><b>Gauge, Sheave (34 Degree)</b> Used to determine wear of sheaves</p>	<p><b>07-00364-00</b></p>
	<p><b>Wrench, Spanner, Fan, Clutch</b> Used to hold the armature during fan clutch removal. (Used on X2 units)</p>	<p><b>07-00396-01</b></p>
	<p><b>Wrench, Spanner, Fan, Clutch</b> Used to hold the armature during fan clutch removal. (Used on X4 units)</p>	<p><b>07-00396-02</b></p>
	<p><b>Wrench, Spanner, Solenoid Evap</b> Used to remove the stem on the remote evaporator liquid solenoid valve. Due to space restrictions, this tool attaches to a 1/2 inch drive socket ratchet.</p>	<p><b>07-00476-00</b></p>
	<p><b>Condenser Fan Removal Tool</b> Used to remove part number 38-00503-00 condenser fan on 69NT40-511 units.</p>	<p><b>07-00399-00</b></p>
	<p><b>Crowfoot Wrench - 1 1/8"</b> 3/8" drive open end crowfoot wrench, used on NT scroll economizer valve.</p>	<p><b>07-00409-00</b></p>
	<p><b>Crowfoot Wrench - 1 3/8"</b> 3/8" drive open end crowfoot wrench; used on NT scroll suction and discharge valves.</p>	<p><b>07-00410-00</b></p>

## Section 5 - General




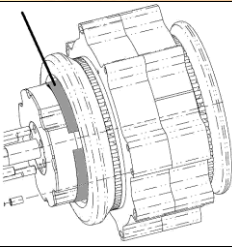

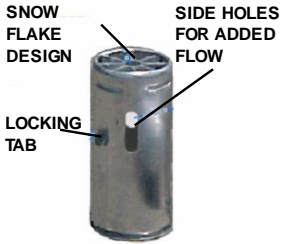
	<p><b>Crowfoot Wrench - 2 1/8"</b></p> <p>3/8" drive open end crowfoot wrench; used on NT Scroll - Suction Modulation Valve.</p>	<p><b>07-00411-00</b></p>
	<p><b>Bit, Torx Driver</b></p> <p>Container battery unlock tool, used to remove the TORX screws on the display to access the lithium back-up battery.</p>	<p><b>07-00418-00</b></p>
	<p><b>Mirror, Inspection</b></p> <p>Replacement for discontinued part number 07-00437 -00. This mirror is the same design except that it now telescopes from 10 to 14 inches in length instead of 15 inches. It has a diameter of 2.25 inches.</p>	<p><b>07-00477-00</b></p>
	<p><b>Rivnut Install Kit Imperial</b></p> <p>Includes rugged thread setter tool and an assortment of fractional Klik Poly -Nuts:</p> <ul style="list-style-type: none"> <li>12 each 8 -32, 10 -24, 10 -32</li> <li>8 each 1/4" -20, and six 5/16" -18 threads.</li> </ul> <p>Equipped with the required nosepieces and mandrels for setting the above sizes.</p> <p>Set is packaged in a storage case.</p>	<p><b>07-00447-00</b></p>
	<p><b>Rivnut Install Kit Metric</b></p> <p>Metric version of the HP650 with metric poly -nuts, including:</p> <ul style="list-style-type: none"> <li>25 each 4 and 5mm</li> <li>15 each 6mm</li> <li>10 each 8mm threads.</li> </ul> <p>Thread setter tool, required nosepieces, and mandrels.</p> <p>Set is packaged in a storage case.</p>	<p><b>07-00451-00</b></p>




## Section 5 - General

	<p><b>Tap, Thread, Left-Handed</b></p> <p>This thread tap tool is used to clean out the threads in the end of the fan shaft (50-00232-##) during service on XT units.</p> <p><b>NOTE:</b> The fan shaft (50-00232-##) also has external threads that hold the clutch on with a spanner nut. These threads can be cleaned and chased using a thread die, 1-9/16-18NS-3, left handed purchased locally.</p>	<p><b>07-00453-00</b></p>
	<p><b>Lifting Device, 20/30S and "X" Units</b></p> <p>This is a 3-way hoist used to lift 20S, X and 30S, X units during installation.</p>	<p><b>07-60049-00</b></p>
	<p><b>Lifting Device, 40S/50S and X Units</b></p> <p>This is a hoist used to lift 40S, X/50S, X units during installation.</p>	<p><b>07-60091-00</b></p>
	<p><b>Lifting Tool, Vector, Generator</b></p> <p>Used on Vector trailer units as a generator service tool.</p> <p><b>Locking Ear and Nut</b></p> <p>Used on 07-60085-02. It is designed to be offered as a replacement part, but also as an option to upgrade the older -00 and -01 tools to make them the latest mandatory -02 tool.</p>	<p><b>07-60085-02</b></p> <p><b>07-60085-50</b></p>
	<p><b>Removal Bracket, Vector Generator</b></p> <p>Used to rest the generator on during generator removal for Vector trailer units.</p>	<p><b>SKM-5670</b></p>

## Section 5 - General




	<p><b>Engine Platform Tool</b> Used to rest engine on during swing to remove Vector generator.</p>	<p><b>86-04751-00</b></p>
	<p><b>Threaded Rod, Vector Generator Removal</b> Used on Vector trailer units to remove/install the generator on the engine.</p>	<p><b>07-60121-00</b></p>
	<p><b>Flywheel Locking Tool</b> Used on Vector trailer units to prevent the engine from turning while working on the generator.</p>	<p><b>07-60083-00</b></p>
	<p><b>Shim, Vector Generator Service</b> Used to protect generator windings during service/shipping.</p>	<p><b>54-00630-25</b></p>
	<p><b>Rain Cap – Flip Top</b> This universal flip top rain cap is used to keep debris and moisture from entering the exhaust pipe.</p>	<p><b>30-00210-00</b></p>
 <p>SNOW FLAKE DESIGN SIDE HOLES FOR ADDED FLOW LOCKING TAB</p>	<p><b>Anti-Siphon Tank Insert</b> These 1.875 inch ID tank inserts are designed to foil even the most determined thief. Made from the finest quality materials, they offer the following key benefits:</p> <ul style="list-style-type: none"> <li>• Easy snap-in installation</li> <li>• Self-locking when snapped in</li> <li>• 60 gallon-per-minute flow rate</li> <li>• No hassling with keys and locking fuel caps</li> <li>• Low cost</li> </ul>	<p><b>65-50001-00</b></p>

## Section 5 - General

 A photograph of an epoxy repair kit. It includes a roll of white fiberglass cloth, a small packet of resin, a tube of hardener, and a printed instruction sheet titled "Professional Repair System".	<p><b>Epoxy Repair Kit for Evaporator Pods</b></p> <p>This can be used on fiberglass or to repair the composite/plastic pods. Two-part resin epoxy, one roll fiberglass cloth 3" wide by 3'.</p>	<p><b>76-50063-00</b></p>
--	--	---------------------------



## Section 6 - Refrigeration

	<p><b>Manifold Gauge Set</b> Used on R134a systems; gauges read in PSI. Hoses are barrier type with quick connect couplers on the high and low side hoses and 1/2 Acme fitting on the center hose.</p>	<p><b>07-00294-00</b></p>
	<p><b>Manifold Gauge Set</b> Used on R134A systems; gauges read in bar. Hoses are barrier type with quick connect couplers on the high and low side hoses, and 1/2 Acme fitting on the center hose. Includes: Hose set 07-00307-00, coupler 07-00307-04 and coupler 07-00307-05.</p>	<p><b>07-00294-05</b></p>
	<p><b>Manifold Gauge Set, Kit CFC</b> Used on R-12, R-22, R-500 and R-502 systems. Hoses are 60 inch barrier type hoses with anti-blowback valves on the service ends. Includes: hand wheels 07-00237-04, gauge 07-00237-05, gauge 07-00237-06, hose set 58-04030-00</p>	<p><b>07-00314-00</b></p>
	<p><b>Manifold Gauge Set, R744 (C02)</b> Used on R744 systems; gauges read in bar. Hoses are barrier type with quick connect couplers on the high and low side hoses, and 1/2 Acme fitting on the center hose.</p>	<p><b>07-00527-00</b></p>
	<p><b>Manifold Gauge Set, R134A, Container</b> Used on R134a Container units. Gauges read in PSI. Hoses are barrier type hoses with quick connect couplers on the high and low side hoses and 1/2 Acme fitting on the center hose.</p>	<p><b>07-00528-00</b></p>
	<p><b>Handwheel Package</b> Hand wheel set for most older gauges. Replacement wheels for the 07-00294-05 and older Robinair sets.</p>	<p><b>07-00237-04</b></p>
	<p><b>Low Side Compound Gauge for CTD P/N 07-00294-00</b> Low side compound gauge for P/N 07-00294-00. Gauge reads in PSI.</p>	<p><b>07-00294-01</b></p>

## Section 6 - Refrigeration

	<p><b>High Side Pressure Gauge for CTD P/N 07-00294-00</b>            High side gauge for P/N 07-00294-00.            Gauge reads in PSI.</p>	<p><b>07-00294-00</b></p>
	<p><b>Compound Gauge for CTD P/N 07-00314-00 CFC</b>            Low side compound gauge for P/N 07-00314-00.</p>	<p><b>07-00237-05</b></p>
	<p><b>High Side Pressure Gauge for CTD P/N 07-00314-00 CFC</b>            High side compound gauge for P/N 07-00314-00.</p>	<p><b>07-00237-06</b></p>
	<p><b>Hose Set</b>            Replacement hose set for manifold gauge set (P/N 07-00314-00).</p>	<p><b>58-04030-00</b></p>
	<p><b>Hose Set (Consists of 07-00307-01, -02, -03)</b>            Replacement hose set for manifold gauge sets (P/N 07-00294-00 and 07-00294-05).            Includes Hoses, 07-00307-01, 07-00307-02 and 07-00307-03.</p>	<p><b>07-00307-00</b></p>
	<p><b>Hose, Yellow</b>            72 inches long, barrier type. Replacement hose for use on center connection of manifold gauge sets (P/N 07-00294-00 and 07-00294-05).</p>	<p><b>07-00307-01</b></p>

## Section 6 - Refrigeration







	<p><b>Hose, Red</b> 72 inches long, barrier type. Replacement hose for use on high side connection of manifold gauge sets (P/N 07-00294-00 and 07-00294-05).</p>	<p><b>07-00307-02</b></p>
	<p><b>Hose, Blue</b> 72 inches long, barrier type. Replacement hose for use on low side connection of manifold gauge sets (P/N 07-00294-00 and 07-00294-05).</p>	<p><b>07-00307-03</b></p>
	<p><b>Gasket</b> Replacements for manifold gauge hoses 1/4 inch. Package of 6.</p>	<p><b>07-00237-12</b></p>
	<p><b>Gasket</b> Replacements for manifold gauge hoses 3/8 inch. Package of 6.</p>	<p><b>07-00237-13</b></p>
	<p><b>Coupler, Quick-Connect, Gauge Hose Low Side R134A</b> Quick connect couplers for low side hose on gauge set (P/N 07-00294-00 and 07-00294-05). Uses gasket 07-00331-00 and O-ring 42-50017-00.</p>	<p><b>07-00307-04</b></p>

## Section 6 - Refrigeration

	<p><b>Coupler, Quick-Connect, Gauge Hose High Side R134A</b>          Quick connect couplers for high side hose on gauge set (P/N 07-00294-00 and 07-00294-05). Uses Gasket 07-00331-00 and O-ring 42-50018-00</p>	<p style="text-align: right;"><b>07-00307-05</b></p>
	<p><b>Gasket</b>          These are replacement O-rings for the hose side of couplers 07-00307-04 or 07-00307-05. Package of 6.</p>	<p style="text-align: right;"><b>07-00331-00</b></p>
	<p><b>O-Rings (Low Side, smaller than high side)</b>          These are replacement O-rings for the connection side of quick-connect coupler 07-00307-04. Package of 10.</p>	<p style="text-align: right;"><b>42-50017-00</b></p>
	<p><b>O-Rings, (High Side, bigger than low side)</b>          These are replacement O-rings for the connection side of quick-connect coupler 07-00307-05. Package of 10.</p>	<p style="text-align: right;"><b>42-50018-00</b></p>
	<p><b>Vacuum Gauge, Digital (Microns)</b>          Used to measure deep vacuums in microns, down to 10 microns, for accurate dehydration vacuums. Features:</p> <ul style="list-style-type: none"> <li>• 2.5 X 3 inch size</li> <li>• Fitted with 6-foot lead</li> </ul> <p><b>Replacement Sensor</b>          Used on the 07-00414-00 digital vacuum gauge.</p>	<p style="text-align: right;"><b>07-00414-00</b></p> <p style="text-align: right;"><b>07-00414-01</b></p>
	<p><b>Vacuum Gauge, Electronic (Microns)</b>          Good to 1 micron with an input/output fitting for the vacuum hoses. Fittings on meter are input - 1/4 inch male flare. Output fitting is also 1/4 inch male.</p>	<p style="text-align: right;"><b>07-60132-00</b></p>






## Section 6 - Refrigeration

	<p><b>Vacuum Pump, Dual Voltage / Dual Frequency, 110-115/220-240 VAC 50/60 HZ</b></p> <ul style="list-style-type: none"> <li>• 6 CFM (free air)</li> <li>• 2 stage rotary vane type</li> <li>• 1/2 horsepower</li> <li>• 1/4", 3/8" and 1/2" male flare connections</li> <li>• Plug not provided</li> <li>• Pre-wired for 220/240 VAC (change wire terminations in accordance with motor nameplate for 110-115 volt applications)</li> </ul>	<p style="text-align: right;"><b>07-00176-11</b></p>
	<p><b>Heavy Duty Plus II Charging/Vacuum Hose</b> Pull a vacuum much faster with this 3/8" FFL on one end and 1/4" FFL on the other end.</p>	<p style="text-align: right;"><b>07-00237-10</b></p>
	<p><b>Oil Pump - 1 to 5 Gallons</b> Used to manually add refrigeration oil to refrigeration systems</p>	<p style="text-align: right;"><b>07-00516-00</b></p>
	<p><b>Refrigeration Wrench</b> Refrigeration wrench for service valve stems 3/16, 1/4, 5/16, and 3/8.</p>	<p style="text-align: right;"><b>07-00238-00</b></p>
	<p><b>Refrigeration Wrench, Offset</b> Refrigeration wrench, offset for service valve stems 3/16, 1/4, 5/16, and 3/8.</p>	<p style="text-align: right;"><b>07-00238-01</b></p>
	<p><b>Acid Test Kit, Mineral and Synthetic Oil</b> Acid test kit for mineral and alkyl benzene compressor oils.</p>	<p style="text-align: right;"><b>07-00260-00</b></p>

## Section 6 - Refrigeration

	<p><b>Acid Test Kit, Polyolester POE Oil</b></p> <p>Acid test kit for POE compressor oils.</p>	<p><b>07-00337-00</b></p>
	<p><b>Total Test Acid Test Kits (6) Kits</b></p> <p>Comes with six kits under the part number. Each kit includes the case, a tool and a pack of five blue tubes for testing CFC (R-12, 22, 500, 502) refrigerants.</p>	<p><b>07-00265-01</b></p>
	<p><b>(6) Packages of Replacement Blue Tubes</b></p> <p>Replacement tubes for the TotalTest kit (P/N 07-00265-01). Each pack includes five blue tubes, two test tube caps, and a replacement o-ring for the instrument.</p>	<p><b>07-00266-00</b></p>
	<p><b>Refrigerant Analyzer</b></p> <p>An R40 capable refrigerant analyzer used to analyze 134A systems. Helps to keep dangerous counterfeit refrigerants out of the refrigerant supply chain.</p>	<p><b>07-00518-00</b></p>
	<p><b>Leak Detector</b></p> <p>Leak detector for R-12, R-22, R-500, R-502, R134A, R404A refrigerants.</p>	<p><b>07-00295-00</b></p>
	<p><b>Element</b></p> <p>Replacement kit for leak detector 07-00295-00.</p>	<p><b>07-00296-00</b></p>

## Section 6 - Refrigeration

	<p><b>Head Assembly, Halide Leak Detector</b> Used to find chlorine-based refrigerant leaks</p> <p><b>Copper Reactor for Halide Torch</b> Copper Reactor Plate use with 07-00259-00</p>	<p><b>07-00259-00</b></p> <p><b>07-00259-20</b></p>
	<p><b>Leak Detector</b> Bubble leak detector used to locate refrigerant leaks.</p>	<p><b>07-50017-00</b></p>
	<p><b>Programmable Charging/Recovery Meter</b> Three display modes - Lbs/oz; Decimal Lbs.; Kilograms</p> <ul style="list-style-type: none"> <li>• Allows automatic charging or recovery operations.</li> <li>• Color-coded keypad controls</li> <li>• Very high resolution - 0.2 oz./0.010 Lbs./4 grams.</li> <li>• Can be used with all refrigerants.</li> <li>• Advanced charge and recovery. Modes – uses tare weight and maximum capacity of cylinder to calculate maximum charge/recovery available</li> <li>• User programmable memory for up to 99 different stored values.</li> <li>• “Repeat” charge features removable platform and control box with prop stand/hanging hook.</li> <li>• Compact design - completely portable, battery-powered with low battery indicator.</li> </ul>	<p><b>07-00315-00</b></p>





## Section 6 - Refrigeration

 <p>The image shows a yellow and black handheld digital temperature logger. The screen displays '8888' in large digits, with '30.40' below it. The screen also shows 'C' and 'K' for temperature units. The device has several buttons: 'ON/OFF', 'T1/T2', 'T3/T4', 'MAX/MIN', 'HOLD', 'RECALL', 'LOGGING', 'EXIT', and 'ENTER'. The brand name 'APOLLO IV' is visible at the bottom of the device.</p>	<p><b>Temperature Tester - 4-Lead</b></p> <ul style="list-style-type: none"> <li>• Quad Thermocouple input</li> <li>• Differential T1-T2 and T3-T4</li> <li>• Temp range -346° to +2192°F (J)</li> <li>• Temp range -328° to +2498°F (K)</li> <li>• Data logging</li> <li>• 9,999 Memory positions</li> <li>• USB interface (software included)</li> <li>• Thermocouple temperature offset</li> <li>• MIN, MAX, AVG &amp; Hold</li> <li>• Probe Storage</li> <li>• Accepts J, K, T and E type probes</li> </ul> <p><b>Accessories Included:</b></p> <ul style="list-style-type: none"> <li>• 4 K type probes with lead wraps</li> <li>• 2 AAA batteries</li> </ul>	<p style="text-align: center;"><b>07-00504-00</b></p>
 <p>The image shows a coiled yellow cable with two metal probes at the end, used as a spare lead for the temperature tester.</p>	<p><b>Temperature Tester – Spare Lead</b></p> <p>4-foot K-type probes with lead wraps for use with the 07-00504-00 tester.</p>	<p style="text-align: center;"><b>07-00504-01</b></p>
 <p>The image shows a soft carrying case for the temperature tester. It is primarily grey with a yellow section on the top and a yellow zipper pull. The case has a small logo on the front.</p>	<p><b>Temperature Tester – Soft Case</b></p> <p>A soft case for use with 07-00504-00 temperature tester and probes</p>	<p style="text-align: center;"><b>07-00504-02</b></p>
 <p>The image shows a long, thin, grey cable with a metal probe tip at one end, which is a 15-foot sealed temperature probe.</p>	<p><b>Temperature Probe – 15-Foot Sealed</b></p> <p>15-foot sealed temperature probe for use with the old 07-00462 meter.</p>	<p style="text-align: center;"><b>07-00462-01</b></p>

## Section 6 - Refrigeration

	<p><b>Temperature Probe, Air, 15-Foot Sealed</b> 15-foot air temperature probe for use with the old 07-00462 meter.</p>	<p><b>07-00462-03</b></p>
	<p><b>Meter, Refractometer for Compressor Oil</b> Used to measure the amount of residual mineral oil in a system being changed to POE oil.</p>	<p><b>07-00316-00</b></p>
	<p><b>Suction Filter Kit</b> Designed for use with the 05G compressor and includes all parts needed to cycle the suction gas through a replaceable element suction line filter. Kit includes two elements - a pleated filter used for solid particulate removal only and a solid core acid removal element designed for particulate, water, and acid removal.</p>	<p><b>07-00379-00</b></p>
	<p><b>Filter, Solid Core - Acid</b> Replacement filter used in the 14-50056-00 suction filter shell supplied with the 07-00379-00 suction filter kit. It is the activated core for acid removal within the system.</p>	<p><b>14-50054-00</b></p>
	<p><b>Filter, Regular Core</b> Replacement filter used in the 14-50056-00 suction filter shell supplied with the 07-00379-00 suction filter kit. It is the regular core for non-acidic filtering.</p>	<p><b>14-50055-00</b></p>

## Section 6 - Refrigeration

	<p><b>Suction Filter Shell</b> Filter shell that comes in the 07-00379-00 suction filter kit.</p>	<p><b>14-50056-00</b></p>
	<p><b>Filter Housing – Internal</b> Internal filter housing used inside the filter shell to hold the filter cores in the 14-50056-00 suction filter shell.</p>	<p><b>14-50056-01</b></p>
	<p><b>Oil Filter Kit, 05G Compressor</b> The compressor oil filter kit, designed for use with 05G, 05K and 06D compressors with gear oil pumps, comes with an extremely fine micron filter and a bracket to mount the filter below the compressor. The filter is used as a bypass from the compressor oil pump and will not affect compressor lubrication, even if it becomes plugged.</p> <p>The compressor circulates oil through the filter at a rate of approximately one gallon per minute, making oil clean up fast and efficient. Experience has shown that even very contaminated systems will clean up within one to two hours of unit operation with the kit(s) installed.</p>	<p><b>07-00380-00</b></p>
	<p><b>Kit, Hose Cutter, Crimper, Expander and Plastic Case</b> Used to cut, expand, and install fittings on black Carrier refrigerant hose.</p>	<p><b>07-60117-00</b></p>

## Section 6 - Refrigeration

	<p><b>Pliers, Crimping (Part of kit number 07-60117-00)</b> Used to connect the fitting clamps on the black Carrier refrigerant hose.</p>	<p><b>07-60117-10</b></p>
	<p><b>Pliers, Fitting Assembly, EZ Clip</b> Used to connect the fitting to hose on Aeroquip fittings.</p>	<p><b>07-00467-00</b></p>
	<p><b>Tool, Fitting Insertion (for black Carrier hose)</b> Specially developed for after-sales service, this tool can only be used to insert fittings in hoses. The tool is shipped with a set of jaws, an adaptor set, a spring set, and the technical procedure. The components can also be purchased separately:</p> <ul style="list-style-type: none"> <li>• <b>07-60133-10 – Set of jaws</b></li> <li>• <b>07-60133-20 – Set of adaptors</b></li> <li>• <b>07-60133-30 – Set of springs</b></li> </ul> <p><b>Note:</b> Not designed for or applied to APU.</p>	<p><b>07-60133-00</b></p>
	<p><b>Tool, Pinch Off (CU Tube)</b> Pinch off tool for process tubes. Primarily set up for the Matson hermetic container unit, but will work on all process tubes and pinching requirements so tubing can be brazed.</p>	<p><b>07-00385-00</b></p>

## Section 6 - Refrigeration

	<p><b>Valve, Piercing</b> Used to gain access to the refrigerant circuit for gauge reading, charging, evacuation, recovery, etc.</p>	<p style="text-align: right;"><b>07-00386-00</b></p>
	<p><b>Dispensing Gun, Static Mixing (used with Kit 76-50084-200SV)</b> Application gun needed to apply Durabond epoxy used for repair of inserts on container composite control boxes.</p>	<p style="text-align: right;"><b>07-00391-00</b></p>
	<p><b>Refrigerant System Quick Check Kit</b> Used with procedures outlined in instruction sheet 98-50554-00 (R-22/R404A Quick Check Refrigeration System Troubleshooting Procedure), this kit is designed to test the major components used in Carrier Transicold trailer refrigeration units (Phoenix Advantage, Phoenix Ultra, and Optima) that use refrigerants R-22 or R404A. Kit includes the 22-50190-00 wire harness and instruction sheet 98-50554-00.</p>	<p style="text-align: right;"><b>07-50006-00</b></p>
	<p><b>Hex Head Security Stepper Valve</b> This is a specially designed hex bit (Allen wrench) that fits the adjustment screw on the stepper valve (14-00263-00) piston.</p>	<p style="text-align: right;"><b>07-00434-00</b></p>
	<p><b>Magnet, Check Valve Tool – Discharge</b> Designed to open the seat on the X series trailer unit discharge check valve during inert brazing and unit evacuation.</p>	<p style="text-align: right;"><b>14-00331-10</b></p>
	<p><b>Magnet, Container EXV PrimeLINE</b> Designed to manually open the electronic expansion valve during service or troubleshooting.</p>	<p style="text-align: right;"><b>14-00393-52</b></p>



## Section 6 - Refrigeration






	<p><b>Magnet, Container EXV NaturaLINE</b> Designed to manually open the electronic expansion valve during service or troubleshooting.</p>	<p><b>14-00396-20</b></p>
	<p><b>Magnet, Operating Solenoid</b> Used to open solenoid valves manually when no power is available or during service. Inside diameter is 18mm or 0.75 inch</p>	<p><b>07-00512-00</b></p>
	<p><b>Wrench, Spanner Unloader System</b> Designed to fit securely onto the 17-40417-00 unloader valve. Tool was developed as a stronger alternative to the powdered metal tool supplied with the 17-40418 unloader kit.</p>	<p><b>07-00459-00</b></p>
	<p><b>Refrigerant Recovery Unit – 115 VAC.</b> 3/4HP compressor capable of direct liquid.</p> <p><b>Refrigerant Recovery Unit – 230/240VAC</b> 3/4HP compressor capable of direct liquid</p>	<p><b>DIABLO-115V</b></p> <p><b>DIABLO-240V</b></p>
	<p><b>Schrader Core, 3/8 inch, 134A</b> Standard Schrader core for 134A access fittings. Primarily used for Manuli in-line fittings, but can also be used with other access valves. See fittings (Section 4) for other Schrader and special fittings.</p>	<p><b>40-60087-01</b></p>









## Section 7 - Shop Supply, Cleaners, and Chemicals

	<p><b>Oil, Compressor - Synthetic (150)</b>          Synthetic 150 for R-12, R-22, R-500 and R-502          Typical Use Trailer Units.</p> <p><b>Package Size:</b> Six one-gallon containers</p>	<p><b>07-00274-00</b></p>
	<p><b>Oil, Compressor - Mineral (150)</b>          Mineral Oil 150 for R-12, R-22, and R-500          Typical Use Trailer Units.</p> <p><b>Package Size:</b> Six one-gallon containers</p>	<p><b>07-00275-00</b></p>
	<p><b>Oil, Compressor (S-100)</b>          Synthetic 100 for R-12, R-22, R-500 and R-502          Typical Use Truck Units.</p> <p><b>Package Size:</b> 12 one-quart bottles</p>	<p><b>07-00270-00</b></p>
	<p><b>Oil, Compressor - (SW20)</b>          POE 22 for R134A          Typical Use Container</p> <p><b>Package Size:</b> 12 34-ounce cans</p>	<p><b>07-00292-00</b></p>
	<p><b>Oil, Compressor - (SW20)</b>          POE 22 for R134A          Typical Use Container</p> <p><b>Package Size:</b> Six one-gallon cans</p>	<p><b>07-00292-01</b></p>

## Section 7 - Shop Supply, Cleaners, and Chemicals

	<p><b>Oil, Compressor, (PEOE 68)</b></p> <p>POE 68 for 134A and 404A. Typical uses are for 05G and 05K compressors. Available in 1 gallon or pack of 6.</p>	<p><b>07-00317-00</b> <b>1 gallon</b></p> <p><b>07-00317-00PK6</b> <b>6 gallons</b></p>
	<p><b>Oil, Compressor – 50 PAG, R1A, 1 Quart can</b></p> <p>Used in R134A refrigerant bus AC circuits with Seltec/Valeo/Zexel/Ice/Tama TM series compressors. Sold in a one quart, screw top metal can.</p> <p><b>Package Size:</b> One-quart can</p>	<p><b>46-50006-00</b></p>
	<p><b>Oil Compressor (S-68)</b></p> <p>POE 22 for R-134A and R-404A Typical use is on truck refrigeration units.</p> <p><b>Package Size:</b> 12 ounce cans</p>	<p><b>07-00318-00</b></p>
	<p><b>Oil, Compressor S-68</b></p> <p>Synthetic 68 for R-12, R-22 and R-500, R-502. Typical use, truck units.</p> <p><b>Package Size:</b> Pack of (6) 1 quart bottles.</p>	<p><b>07-00320-00</b></p>
	<p><b>Oil, 32ST</b></p> <p>Mobile Arctic 32 ST polyolester (POE) oil for R-134. Commonly used for container units with scroll compressors (69NT40-531 for example)</p> <p><b>Package Size:</b> One quart can</p>	<p><b>07-00427-00</b></p>

## Section 7 - Shop Supply, Cleaners, and Chemicals

	<p><b>Oil, Castrol E-68</b> POE Oil Typical use: 5F, 5H, 05K, 06D and 06E compressors for Marine units.</p> <p><b>NOTE:</b> Used to be part number 07-00405-00.</p>	<p style="text-align: center;"><b>P903-1701</b></p>
	<p><b>Oil, Refrigerant (Soltex VG 68) Gallon</b> For ALKYL BENZENE applications</p> <p><b>Package Size:</b> One gallon container</p>	<p style="text-align: center;"><b>07-00430-00</b></p>
	<p><b>Oil, Compressor (5GS)</b></p> <p>Mineral Oil 500 for R502. Typical Use Truck Units Rotary Compressors.</p> <p><b>Package Size:</b> 12 one-quart bottles</p>	<p style="text-align: center;"><b>07-00325-00</b></p>
	<p><b>Oil, Vacuum Pump</b></p> <p><b>Package Size:</b> 12 one-quart bottles</p>	<p style="text-align: center;"><b>07-00328-00</b></p>
	<p><b>Oil, Compressor – POE 35 TK Trailer units with 404A, 1 gallon</b></p> <p>POE 35 for R134A and R404A Thermo King trailer units</p>	<p style="text-align: center;"><b>07-00349-00</b></p>
	<p><b>Oil, Compressor – POE 32 TK Container Units. Case of 4 gallons</b></p> <p>POE 32 for R134A and R404A Thermo King container units</p> <p><b>Package Size:</b> Case of (4) 1 gallon bottles</p>	<p style="text-align: center;"><b>07-00354-00</b></p>







## Section 7 - Shop Supply, Cleaners, and Chemicals

	<p><b>Oil, Synthetic Gear Box 75W-90 (Ultra gear case)</b></p> <p>Synthetic gear oil 75W-- 90 for the 90 degree trailer unit gear box.  <b>Package Size:</b> (12), 12 oz bottles</p>	<p><b>07-00359-00</b></p>
	<p><b>Oil, Fan shaft , Trailer</b></p> <p>Used in the lubrication of fan shafts.  <b>Package Size:</b> Package of (12), 8oz bottles.</p>	<p><b>07-00373-00</b></p>
	<p><b>Oil, Compressor 300 Mineral</b></p> <p>Mineral Oil 300 for R-12, R-22, and R-500  Typical Use Large Bus</p>	<p><b>07-00377-00</b></p>
	<p><b>Grease, Heat Conductive Sealer</b></p> <p>Used to improve conduction of heat at TXV bulb location.</p>	<p><b>02-00010-00 (1 gallon)</b></p> <p><b>02-00010-01 (7.5oz)</b></p>
	<p><b>Grease, N-2</b></p> <p>For use on TK clutches.  <b>Package Size:</b> 14 ounce tube</p>	<p><b>46-50002-00</b></p>

## Section 7 - Shop Supply, Cleaners, and Chemicals

	<p><b>Grease, Lithium Base</b></p> <p>For use on linear solenoids. This grease is not affected by moisture, heat, or cold.</p> <p><b>Package Size:</b> 5.3 ounce tube</p>	<p><b>07-00245-00</b></p>
	<p><b>Dielectric Grease</b></p> <p>Used to protect electrical connections from moisture and corrosion</p> <p><b>Package Size:</b> 3.5 ounce tube</p>	<p><b>46-00037-00</b></p>
	<p><b>Sikaflex Caulk Sealant</b></p> <p>A high-quality multi-purpose non-sag 1-c polyurethane sealant that cures on exposure to atmospheric humidity to form a durable elastomer.</p> <p><b>Package Size:</b> 10.3 ounce tube</p>	<p><b>02-00067-01</b></p>
	<p><b>Loctite 609</b></p> <p>Primary usage is on clutch hub threads in Truck/Trailer.</p>	<p><b>02-00130-01</b></p>
	<p><b>Sealant, Pipe Fittings on 134A Units</b></p> <p>Sealant for pipe fittings on units using HFC Refrigerants. (R134A and R404A). 50ml tube.</p> <p><b>Package Size:</b> 50 ml tube</p>	<p><b>07-00345-00</b></p>

## Section 7 - Shop Supply, Cleaners, and Chemicals

	<p><b>Red Insulating Varnish</b></p> <p>Red glyptal varnish used to seal alternator studs and other electrical generating and power studs. Prevents corrosion. Brush not included</p> <p><b>Package Size:</b> 2-ounce bottle</p>	<p><b>07-00479-00</b></p>
	<p><b>HumiSeal</b></p> <p>Used to seal the back of printed circuit boards from moisture.</p> <p><b>Package Size:</b> 12-ounce can</p>	<p><b>07-50001-00</b></p>
	<p><b>Gas, Calibration</b></p> <p>Used as a standard to calibrate the sensors on controlled atmosphere units.</p> <p><b>Package Size:</b> 14-ounce bottle</p>	<p><b>07-00322-00</b></p>
	<p><b>Adapter Fitting for Calibration Gas</b></p> <p>Used with 07-00322-00 calibration gas.</p>	<p><b>07-00322-02</b></p>
	<p><b>Smoke Bomb</b></p> <p>Used to test seal integrity and airflow of refrigeration unit ductwork and air systems.</p>	<p><b>16-00037-00</b></p>
	<p><b>Paint, Sea Spray Green</b></p> <p>Unit Touch-Up paint for miscellaneous 38 series units. Also used on: 38GR, CC, CB 48, 50, 58 units.</p> <p><b>Package Size:</b> 16-ounce can</p>	<p><b>PH23GL012</b></p>



## Section 7 - Shop Supply, Cleaners, and Chemicals

	<p><b>Paint, Touch-Up, Seahorse Blue</b> This spray paint is used to touch up Seahorse units and other CTD marine blue units.</p> <p><b>Package Size:</b> 16-ounce can</p>	<p style="text-align: right;"><b>07-00480-00</b></p>
	<p><b>Paint, Touch-Up, (05G and Kubota)</b> This spray paint is used to touch up scratches on 05G compressors and Kubota engines.</p> <p><b>Package Size:</b> 16-ounce can</p>	<p style="text-align: right;"><b>07-00420-00</b></p>
	<p><b>Paint, Touch-Up, Horizon Green</b> This spray paint is used to touch up scratches on 19D and 19C units.</p> <p><b>Package Size:</b> 16-ounce can</p>	<p style="text-align: right;"><b>PH23GH017</b></p>
	<p><b>Paint, Blue, Compressor</b></p> <p>Hull blue compressor paint used on CTD container units. There are two cans of primer and two cans of the epoxy paint.</p> <p><b>Package Size:</b> One pint can</p>	<p style="text-align: right;"><b>76-00397-01</b></p>
	<p><b>Paint, Horizon Green</b></p> <p>Unit touch-up paint for 19 series units</p> <p><b>Package Size:</b> 16-ounce can</p>	<p style="text-align: right;"><b>PH23GH012</b></p>
	<p><b>Coil Cleaner – Evap Foam No Rinse</b></p> <p>High performance, heavy-duty detergent. Foaming, no rinse, aerosol evaporator coil cleaner, <b>foams out dirt!</b> Six 18-ounce cans.</p> <p><b>Package Size:</b> Six 18-ounce cans</p>	<p style="text-align: right;"><b>NU4171-75</b></p>







## Section 7 - Shop Supply, Cleaners, and Chemicals

	<p><b>Coil Cleaner, Citrus</b></p> <p>Citrus type coil cleaner will help clean coils, but not corrode the coil and is easy on unit paint.</p> <p><b>Package Size:</b> Four one-gallon bottles</p>	<p><b>07-00313-00</b></p>
	<p><b>Coil Cleaner, Cal-Brite</b></p> <p>Low pH or acid-based product developed for cleaning evaporator and condenser coils, <b>safe yet aggressive!</b></p> <p><b>Package Size:</b> Four one-gallon bottles.</p>	<p><b>NU4133-08</b></p>
	<p><b>Coil Cleaner, Cal-Shield with Teflon</b></p> <p>Contains Teflon to shield and protect finned cooling and heating coils from dirt and corrosion.</p> <p><b>Package Size:</b> Four one-gallon jugs</p>	<p><b>NU4148-08</b></p>
	<p><b>Coil Cleaner, Cal-Shield with Teflon</b></p> <p>Contains Teflon to shield and protect finned cooling and heating coils from dirt and corrosion.</p> <p><b>Package Size:</b> Six one-quart bottles</p>	<p><b>NU4148-32</b></p>
	<p><b>Coil Cleaner, Tri-Pow'r</b></p> <p>Alkaline detergent/degreaser for cleaning air cooled condensers, evaporator coils, permanent filters, fan blades, motors, etc.</p> <p><b>Package Size:</b> Four one-gallon jugs</p>	<p><b>NU4371-88</b></p>
	<p><b>Coil Cleaner – Nu-Brite</b></p> <p>Revolutionary strong, foaming condenser coil cleaner, Alkaline. <b>The Acid alternative!</b></p> <p><b>Package Size:</b> Four one-gallon jugs</p>	<p><b>NU4291-08</b></p>

## Section 7 - Shop Supply, Cleaners, and Chemicals

	<p><b>Coil Cleaner – Nu-Brite</b></p> <p>Revolutionary strong, foaming condenser coil cleaner, Alkaline. <b>The Acid alternative!</b></p> <p><b>Package Size:</b> 2.5 gallon pail or 55 gallon</p>	<p><b>2.5 Gallon NU4291-05 55 Gallon NU4291-01</b></p>
	<p><b>Coil Sanitizer – Bio-Fresh CD</b></p> <p>A concentrated, ready to use bacteriostat-fungistat-deodorizer formulated for use in HVACR systems.</p> <p><b>Package Size:</b> 12 one-quart bottles</p>	<p><b>NU4126-34</b></p>
	<p><b>Coil Sanitizer – Bio-Fresh CD</b></p> <p>A concentrated, ready to use bacteriostat-fungistat-deodorizer formulated for use in HVACR systems.</p> <p><b>Package Size:</b> Four one-gallon jugs</p>	<p><b>NU4126-38</b></p>
	<p><b>Coil Sanitizer – PanPads ACP</b></p> <p>Condensate drain pads prevent bacteria and slime in pans. Combats a broad spectrum of harmful bacteria.</p>	<p><b>NU4295-34</b></p>
	<p><b>Sprayer, No. 50P Poly</b></p> <p>Pump sprayer for coil cleaners, half-gallon capacity.</p> <p><b>Package Size:</b> One sprayer</p>	<p><b>NU4770-00</b></p>

## Section 7 - Shop Supply, Cleaners, and Chemicals

	<p><b>Sprayer, No. 220CP</b> Pump sprayer for coil cleaners, 2 gallon capacity.</p> <p><b>Package Size:</b> One sprayer</p>	<p><b>NU4771-30</b></p>
	<p><b>Sprayer, No. 300CP</b> Pump sprayer for coil cleaners, 2 gallon capacity.</p> <p><b>Package Size:</b> One sprayer</p>	<p><b>NU4772-00</b></p>
	<p><b>Sprayer, Coil Gun</b> Hose end sprayer with mixing valve to dilute coil cleaners.</p> <p><b>Package Size:</b> One gun</p>	<p><b>NU4774-00</b></p>
	<p><b>Insulation – Insulation Slugs</b> Thumbing grade slugs for plugging holes.</p> <p><b>Package Size:</b> 24 two-pound boxes</p>	<p><b>NU4216-92</b></p>
	<p><b>Insulation – Cork Insulation Tape</b> Insulation tape for wrapping refrigerant lines.</p> <p><b>Package Size:</b> 12 – 2” x 30’ Rolls</p>	<p><b>NU4217-W3</b></p>
	<p><b>Insulation – Foam Insulation Tape</b> Insulation tape for wrapping refrigerant lines.</p> <p><b>Package Size:</b> 12 – 2” x 30’ Rolls</p>	<p><b>NU4218-W3</b></p>


## Section 7 - Shop Supply, Cleaners, and Chemicals

	<p><b>Insulation – Nu-Foam Insulation Foam</b>  A triple expanding foam that insulates as well as seals cracks, crevices and other openings. Created for refrigeration, air conditioning and heating pipes and tubing.</p> <p><b>Package Size:</b> 9 oz or 20 oz cans</p>	<p><b>9 oz</b>  NU4293-04  <b>20 oz</b>  NU4293-75</p>
	<p><b>Gas leak Detectors – Cal-Blue</b>  Gas leak detector.</p> <p><b>Package Size:</b> Four one-gallon jugs</p>	<p><b>NU4182-08</b></p>
	<p><b>Gas leak Detectors – Cal-Blue</b>  Gas leak detector with trigger spray.</p> <p><b>Package Size:</b> 12 one-quart bottles</p>	<p><b>NU4182-24</b></p>
	<p><b>Gas leak Detectors – Cal-Blue</b>  Gas leak detector with dauber in cap.</p> <p><b>Package Size:</b> 24 6-ounce bottles</p>	<p><b>NU4182-53</b></p>
	<p><b>Flush - Rx11 Flush, 2-in1 Display</b>  Rx11 flushing solvent for burnouts and oil removal. Two cylinder pack with valve.</p> <p><b>Package Size:</b> One two-cylinder pack.</p>	<p><b>NU4300-10</b></p>

## Section 7 - Shop Supply, Cleaners, and Chemicals

	<p><b>Flush - Rx11 Flush</b> Rx11 flushing solvent for burnouts and oil removal. Single cylinder.</p> <p><b>Package Size:</b> Four single cylinders</p>	<p><b>NU4300-11</b></p>
	<p><b>Flush – Rx11 Flush</b> Rx11 flushing solvent for burnouts and oil removal. 50 ton capacity.</p> <p><b>Package Size:</b> 15 pound cylinder</p>	<p><b>NU4300-15</b></p>
	<p><b>Flush – Rx11 Flush Fitting Assembly</b> Access valve with Acme fitting for single Rx11 cylinders.</p> <p><b>Package Size:</b> One valve</p>	<p><b>NU4300-99</b></p>
	<p><b>Flush – Rx Acid Scavenger</b> Acid neutralizer for refrigeration oil. 2oz treats up to one gallon of contaminated oil.</p> <p><b>Package Size:</b> Six two-ounce bottles</p>	<p><b>NU4301-02</b></p>
	<p><b>Hand Towels – Kleen-N-Toss</b> Scrubbing hand cleaning towels with special cleanser.</p> <p><b>Package Size:</b> Six 72-towel buckets</p>	<p><b>NU4230-72</b></p>

## Section 7 - Shop Supply, Cleaners, and Chemicals

 The image shows a retail box for the Phase III Refrigeration Oil Acid Test Kit. The box is white with red and black text. It features the product name 'PHASE III REFRIGERATION OIL ACID TEST KIT' and the part number '4320-W8'. Below the name, it lists the types of oils it is used for: 'For use on Mineral Oils, Alkylbenzene Oils and Polyol Ester Lubricants'. The Alcatel logo is also visible. To the right of the box are two clear plastic bottles with black caps; the larger one contains a pink liquid, and the smaller one is empty. At the bottom of the box, it says 'STORE IN A COOL PLACE'.	<p><b>Oil Test Kit – Phase III</b> Refrigeration oil acid test kit.</p> <p><b>Package Size: 24 kits</b></p>	<p><b>NU4320-W8</b></p>
---	---	-------------------------







North America  
Carrier Transicold  
700 Olympic Drive  
Athens, GA 30601 Usa  
Phone: 1-706-357-7223  
Fax: 1-706-355-5435

Central America  
and Mexico  
Ejercito Nacional 253-A Piso 5  
Colonia Anahuac  
11320 Mexico, D.F.  
Phone: 5531501 0  
Fax: 5531501 0 ext. 1005



**United  
Technologies**

**Building & Industrial Systems**

Carrier Transicold Division  
Carrier Corporation  
P.O. Box 4805  
Syracuse, NY 13221 USA

[www.carrier.transicold.com](http://www.carrier.transicold.com)



A member of the United Technologies Corporation family. Stock symbol - UTX  
©2016 Carrier Corporation - Printed in U.S.A. - 02/16